

# 4G Cellular IoT M2M RTU



**KING PIGEON**



## S270/S271 User Manual

Ver 3.4.1

Date Issued: 2020-08-18













King Pigeon Hi-Tech. Co., Ltd.

[www.iot-solution.com](http://www.iot-solution.com)



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

## Table of contents

<b>1. Brief introduction</b> .....	6
<b>2.Safety Directions</b> .....	7
<b>3. Standard Packing List</b> .....	7
<b>4. Mainly Features and Specifications</b> .....	8
4. 1Mainly Features.....	8
4. 2 Specifications.....	8
<b>5. Physical Layout and Installation Diagram</b> .....	9
5.1 Control Unit size.....	9
5.2 LED Indicator Definition.....	10
5.3 Interface Definition.....	11
<b>6. Settings &amp; Operation</b> .....	14
6.1 Start to Configure.....	15
6.2 Setting Self-checking.....	17
6.3 Configurator software interface and running.....	18
 Basic Settings.....	19
 Number Settings.....	20
 Output Settings.....	21
 Incoming Control Settings.....	23
 DIN Trigger Settings.....	23
 DIN/AIN Alarm Settings.....	25
 AIN Trigger Settings.....	25
 Timer Settings.....	27
 Logic Trigger Settings.....	28
 Network Settings.....	28
 Historical Record.....	30
<b>7. Example Of Applications</b> .....	31
7.1 Device working self-checking.....	31
7.2 Device connect analog transducer.....	33
7.3 Cloud configuration, wechat notify application.....	37
<b>8. Device SMS Command and SMS APP</b> .....	38
<b>9. Device GPRS/3G/4G Communication Protocol</b> .....	42
9.1 Device Networks Topology.....	42
9.2 Communication Networks.....	42
 S270/S271 RTU I/O Register List and Function Code.....	43



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

9.3 Message communication sequence.....	45
9.4 King Pigeon IoT RTU Protocol/ Definition Protocol.....	45
9.5 Modbus TCP Protocol.....	46
9.6 Modbus RTU Over TCP.....	46
9.7 Modbus RTU over TCP Communication Application.....	47
<b>10. MQTT.....</b>	<b>50</b>
<b>11. Upgrade Firmware.....</b>	<b>53</b>
<b>12. Cellular Module Upgrade.....</b>	<b>53</b>
<b>13. Warranty.....</b>	<b>53</b>

This handbook has been designed as a guide to the installation and operation of S270~S271 GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

Statements contained in the handbook are general guidelines only and in no way are designed to supersede the instructions contained with other products.

We recommend that the advice of a registered electrician be sought before any Installation work commences.

King Pigeon Hi-Tech.Co., Ltd, its employees and distributors, accept no liability for any loss or damage including consequential damage due to reliance on any material contained in this handbook.

King Pigeon Hi-Tech.Co., Ltd, its employees and distributors, accept no liability for GSM Network upgrading or SIMCard upgrading due to the technology specifications contained in this handbook.

## [Warm Tips---Read Before Use]

With the rapid development of industrial Internet of things, it has been widely used in various fields, but it involves a wide range of knowledge from sensor, intelligent instrument, gateway, 4G wireless communication, to cloud server, large screen display, app, etc

The professional knowledge of users has higher requirements, so please electronic engineers to install and set. We suggest you be careful reading this article will help you quickly and successfully complete the product setup and implementation of your application.

### 1. Working Principle


Taking a few minutes to understand the working principle of this product will help users quickly understand the working principle of the device and clarify their ideas, and realize the function of these applications.

#### 1) Device Working Principle

This device collects front-end sensor and meter data, and after logical processing and calculation, it is sent to the mobile phone number set by the user via SMS or sent to the designated cloud server via the data network. The cloud server identifies the device according to the unique number of the device. The relationship between the device and the user, while pushing cloud data to the APP or WeChat official account bound to the user.



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

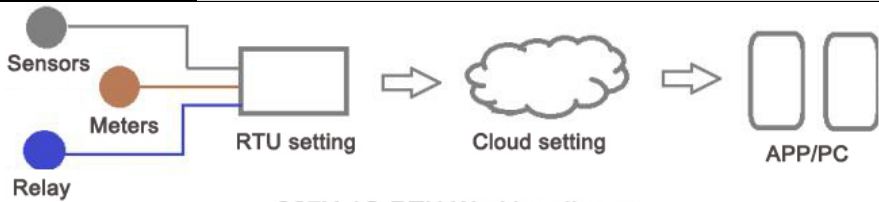

S27X 4G RTU Working diagram

## 2) Functional components of the overview

According to the type of transmitter and sensor supported by the equipment, select the appropriate model. Please refer to 1.6 technical parameter description to confirm whether the selected sensor is suitable and wiring.

### RTU device:

It is used to read the sensor data, and then perform the logical processing of the data. The processed data is transmitted to the cloud platform server via SMS or 4G wireless network. At the same time, the RTU device also accepts the instructions of the cloud platform server and performs logical processing, drive IO device.

### Cloud server

To access the cloud platform, you need to set the server target address on the RTU device side, and then the RTU device takes the initiative to initiate a connection, the cloud platform must also set the RTU device parameters to receive the data sent by the RTU device.


After receiving the data, the cloud platform server processes the data according to the rules, stores it in the database, and pushes it to the computer user or App users

### Mobile phone/computer:

First, register an account in the cloud platform and bind the corresponding RTU device. After receiving the data uploaded from the RTU device, the cloud platform can push it to the corresponding mobile phone app and computer users after processing. Similarly, mobile app or the instructions sent by the computer will also be sent to the cloud platform first, and then the cloud platform will be pushed to the RTU device.

## 2. Device setting step

This product involves front-end sensors, logic processing of equipment itself, cloud platform data management, app and other parts. Therefore, understanding the setting sequence and steps of this product will help users quickly and orderly set device parameters and access to cloud platform to realize various application functions of users

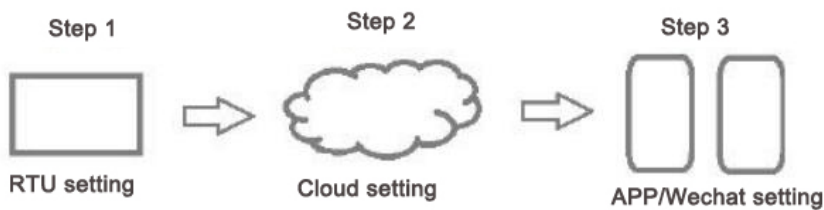

### Step1: Hardware settings [set locally]

Set parameters according to the manual, IO input and output wiring specifications, logic judgment and control, RS485 serial port expansion and application, equipment and configuration software and cloud platform server communication parameter settings, etc.



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

**Step2:** Cloud settings

Only by setting the relevant parameters of the device on the cloud platform can the relationship between the device and the user be read, and the large screen display can be set content, cloud platform voice alarm, equipment and video monitoring Association, cloud platform SMS alarm, cloud platform mailbox alarm, and User management rights and other functions.

**Step3:** APP download and wechat settings(if need)

**Step4:** Test and complete the setup.

If you have any questions or settings fail, please read "S27x 4G RTU FAQ" or find the corresponding model in the help center of <http://www.iot-solution.com> to find solutions.

**【UPGRADE HISTORY】**

DATE	CONFIGURATOR VERSION	FIRMWARE VERSION	Author	DESCRIPTION
2018.12.21	V3.0	V3.0	KG	<ol style="list-style-type: none"> <li>1.Modbus address and function code revised;</li> <li>2.AIN/DIN alarm content setting revised;</li> <li>3. Interlock event added.</li> </ol>
2019.09.24	V3.01	V3.2	ZYH	<ol style="list-style-type: none"> <li>1. Cellular default settings</li> <li>2. Delete SDK function</li> </ol>
2020.7.24	V3.2	V3.3	CJ	<ol style="list-style-type: none"> <li>1. Add DIN1-3 low speed pulse counter</li> <li>2. Add MQTT</li> <li>3. Add "warm tips"</li> <li>4. Add notes to user FAQs</li> <li>5. Modify the configuration software picture and Di, Ai description</li> <li>6.Fix some errors</li> </ol>
2020.8.03	V3.4	V3.4	ZLF	<ol style="list-style-type: none"> <li>1. Add IO internal schematic block diagram and wiring</li> <li>2. Modify mqtt parameter settings</li> </ol>
2020.8.18	V3.4.1	V3.4.1	CJ	<ol style="list-style-type: none"> <li>1.Modify the preparation step error before configuration</li> </ol>

**Model List**

Model	DIN	AIN	Relay	TH	SD Card	Extend I/O tags/Mapping registers	Port
-------	-----	-----	-------	----	---------	-----------------------------------	------




# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

						Boolean	16-Bit	32-Bit	64-Bit	
S270	2	2	2	1		x	x	x	x	USB
S271	4	4	4	1		x	x	x	x	
S272	8	6	4	1	8G	64	64	x	x	USB/RS485
S275	8	6	4	1	8G	64	128	64	64	

Notice

1. Default version is GSM/GPRS module inside.
2. For 3G WCDMA, 4G LTE version, please tell our sales where would you like to use them.

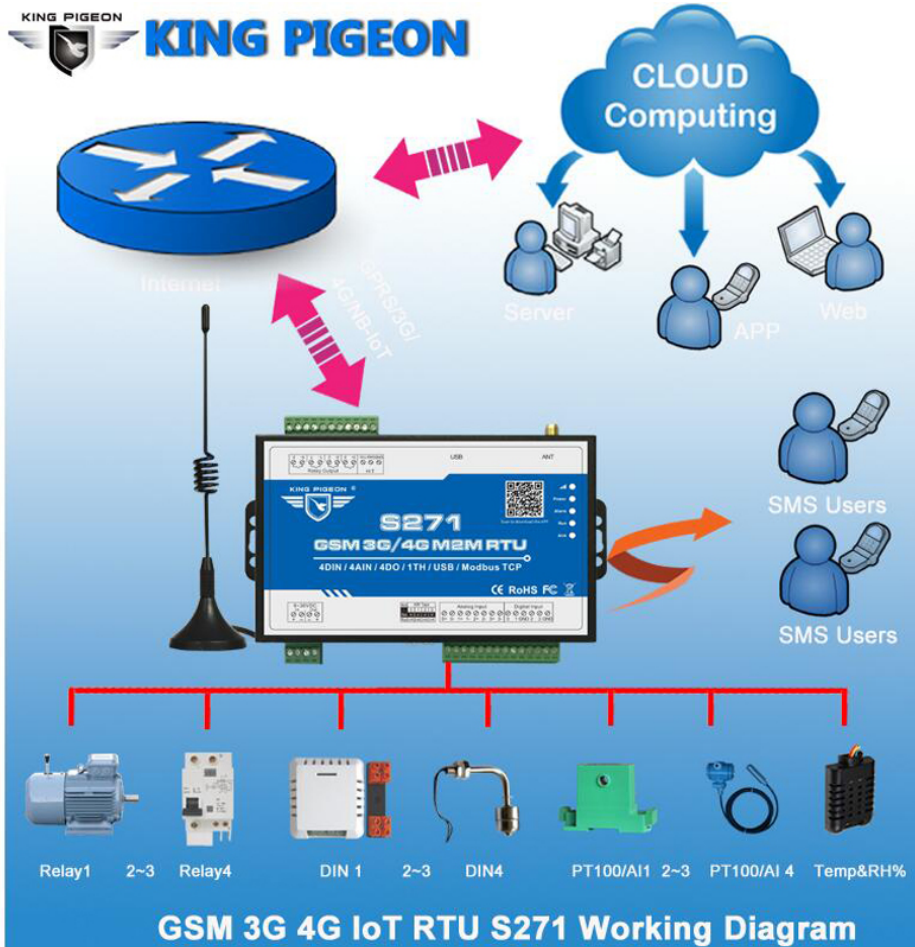

## 1. Brief introduction

The Cellular IoT M2M RTU is an industrial class, high reliability, high stability, and programmable Remote Terminal Unit (RTU). It embedded 32-Bit High Performance Microprocessor MCU, inbuilt industrial Cellular module. It provides 4/2 digital inputs, 4/2 analog or PT100 Resistance Temperature Detector (RTD) inputs, 4/2 relay outputs, 1 ambient sensor input for monitoring onsite temperature and humidity. It can monitoring and operates the I/O



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

ports by SMS, APP, Web Server, internet, timers and programmed inter-lock events automatically.

The Cellular IoT M2M RTU inbuilt TCP/IP protocol stack make it suitable for internet of things (IoT) applications, it can be easily to operate by the provided cloud, app, and web server, or integrated to you IoT applications according to the TCP/UDP protocol, or integrated to SCADA systems by standard Modbus TCP protocol, too. This is very useful if you need remote control onsite devices with low cost solution.

The Cellular IoT M2M RTU is design for working in the harsh industrial application environment, widely used in a variety of industrial automation, security monitoring system, automatically measurement and control system, BTS monitoring, remote data acquisition, telemetrically systems, automatically control system. It can be used as a remote switch, remote I/O, remote smart PLC, timer switches.

The Cellular IoT M2M RTU can be used as remote access control for BTS monitoring, the authorized users can open the gate or turn on the machine with a free charge call at specified time, this is useful for daily maintenance to save the time of traditional authorized.

### Typically applications:

BTS Monitoring, Security Alarm System applications, Supervision and monitoring alarm systems, Automatic monitoring system, Vending Machines security protection, Pumping Stations, Tanks, Oil or Water levels, Buildings and Real Estate, Weather Stations, River Monitoring and Flood Control, Oil and gas pipelines, Corrosion protection, Temperatures, water leakage applications, Wellheads, boat, vehicle, Energy saving, street lights control system, Valve controls, Transformer stations, Unmanned machine rooms, Control room application, Automation System, M2M, Access Control System, etc.

## 2. Safety Directions



### Safe Startup

Do not use the unit when using GSM/3G/4G equipment is prohibited or might bring disturbance or danger.



### Interference


All wireless equipment might interfere network signals of the unit and influence its performance.

## 3. Standard Packing List

RTU X1; AC/DC Adaptor X1; GSM/3G/4G Antenna X1; User Manual X1; PC Configurator X1 .

*Note: The package does not include any SIM card.*

**Optional:** 35mm Standard DIN rail fixed Bracket

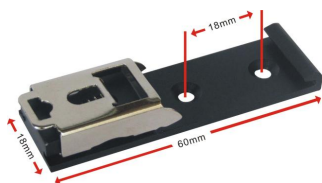



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

## 4. Mainly Features and Specifications

### 4.1 Mainly Features

- GSM/GPRS/3G/4G network communication, can be operated from anywhere, no distance limitation;
- Wide range power supply 9~36VDC with over voltage and phase-reversal protection;
- Embedded ARM<sup>®</sup> Cortex<sup>™</sup>-M4 32 Bit RISC Core, 168 MHz inside, RTOS system, reliable performance with in-built watchdog;
- 2/4 digital inputs, compatibles dry and wet contact. Logic level: 0~0.5V or short circuit treated as close, +3~30V or open circuits treated as open. DI0-3 can be used as counter, sampling frequency is 1Mhz, DI1 can be used as Arm/Disarm;
- 2/4 relay output (5A/30VDC,5A/250VAC), can auto control by timer, alarm-link and remote control by SMS, cloud. The first DO can set time to control by authorize number;
- 1 temperature & humidity sensor input for monitoring onsite environment, the sensor model is AM2301, Measures temperatures from -40-80°C,0.5°C accuracy, Relative Humidity from 0-99RH%, accuracy is 3%;
- 2/4 analog inputs, 12bits resolution, supports 0-5V, 0-20mA, 4-20mA output transducers;
- Powerful SMS function: threshold high SMS alert, SMS set, SMS inquiry;
- Inbuilt 1 DC output for external transducers to save wiring cost;
- Automatically resend the data while communication interrupt or failure, and failure will alert by SMS text to users;
- Supports remotely restart the RTU, and configure& operate it by SMS commands remotely;
- 10 SMS Alert and auto dial numbers for receiving alarm message, can program to receive specified alarm message. The authorized numbers also can dial to open the door or turn on/off machine with a free charge call at the specified time;
- Inbuilt inter-lock logic programmer and powerful timer program function;
- Modular structure design, replace a module can upgrade the network from 2G to 3G/4G or 3G to 4G;
- Support SMS, dial, GPRS, 3G, 4G network for alert, USB port for configuration and upgrade firmware;
- Inbuilt large capacity rechargeable backup battery, alert when external power failure,standby time is 5 hours;
- Support TCP/UDP, MQTT, Modbus TCP, Modbus RTU over TCP, King Pigeon IoT RTU protocol and data transparent transmission function;
- Using metal shell, protection class IP30. Metal shell and system security isolation, especially suitable for industrial applications in the field;
- L140 \* W88 \* H30mm, compatible wall installation and DIN35mm industrial rail installation.

### 4.2 Specifications

Item	Reference Scope
DC Power supply	Standard adapter: DC 12V/2A Range 9-36VDC






## GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

Power consumption	Standby:12V/50mA; Working Max.: 12V/150mA
GSM Frequency	850/900/1800/1900Mhz
3G/4G	Optional: WCDMA/TDD-LTE/FDD-LTE
TCP/IP stack	TCP,UDP
SIM interface	Supporting 3V and 1.8V SIM Card
External antenna	SMA Antenna interface, 50 Ohm, Gain: 3dB
Serial Interfaces	1 USB Port
Protocols	SMS, GPRS UDP,TCP, MQTT,Modbus RTU over TCP and King Pigeon RTU protocol.
Digital Inputs	2/4 Digital input, NC/NO type, All can be used as Pulse Counters; DI0 as a high-speed pulse counter, sampling frequency: 1MHz; DI1~3 as a low-speed pulse counter, the anti-shake time can be set to 1~2000ms, the default is 1ms; DI1 as arm and disarm function; Isolation protection:2KVrms
Analog Inputs	2/4 Analog Inputs. 12 bit resolution, 0-5V or 0-20mA or 4-20mA; Input resistance:>1M ohms
Temp.&Hum Inputs	Temperature range: -40° C to +80° C, Humidity Range: 0~100%RH;
Relay Outputs	2/4, Rated: 5A/30VDC,5A/250VAC Isolation protection:2KVrms
Power Outputs	1 Port, for external device;
Backup Battery	3.7V 900mAH
Temperature range	-20-+70 °C
Humidity range	Relative humidity 95% (condensation free)
Exterior dimension	140mm*88mm*30mm
Net Weight	350g



### 5. Physical Layout and Installation Diagram&Wiring

#### 5.1 Control Unit size

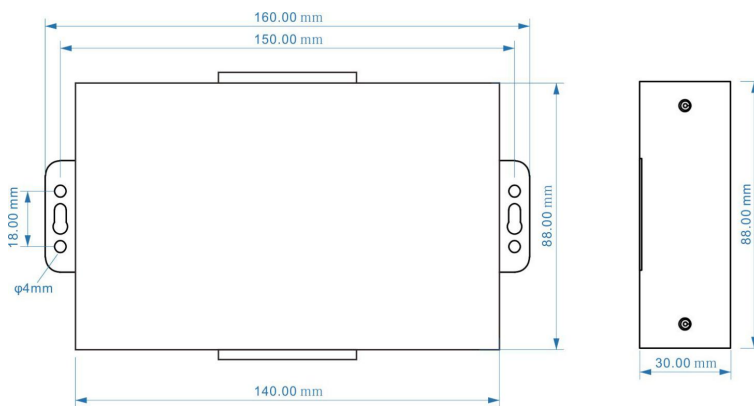



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

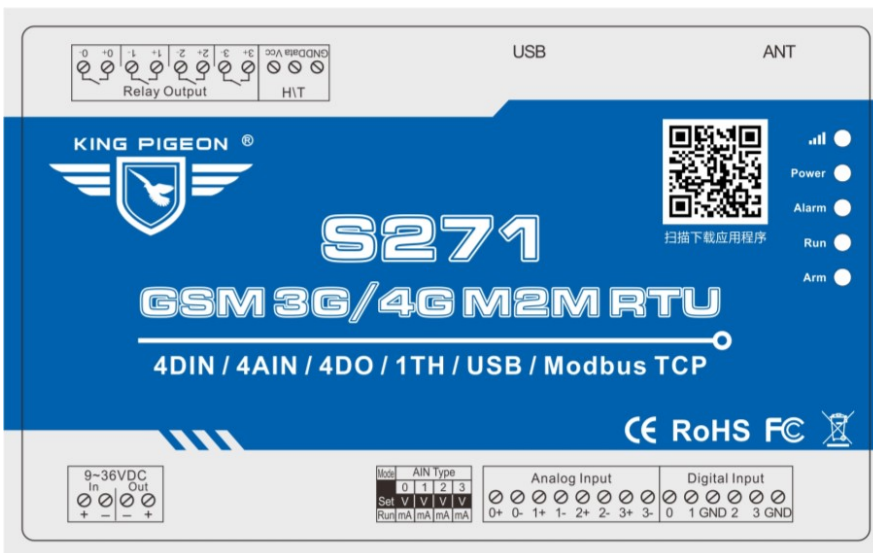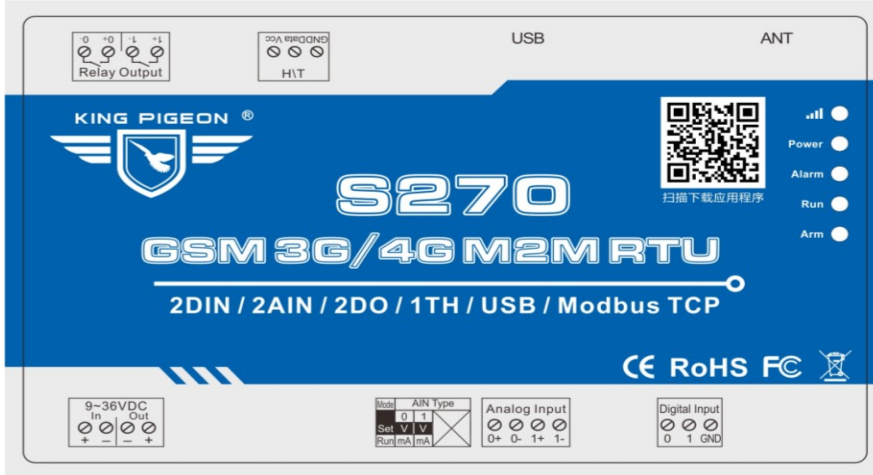

## 5.2 LED Indicator Definition

LED Indicator Definition	
<b>Power</b>	RTU status indicator, LED ON when switched RTU on..
	Cellular network indicator. When 2G register network, off 2 seconds, on 0.5s and so on; When 3G 4G register network, on 2s, off 0.5s...Flicks quickly means data



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

	transmission.
<b>Alarm</b>	Alarm Indicator, alarm will ON and flick. Normally is OFF;
<b>Arm</b>	Arm/Disarmed Indicator, Arm is ON, disarmed is OFF.
<b>Run</b>	RTU running status indicator, ON or OFF stands for RTU halted, flicks slowly stands for RTU running.

## 5.3 Interface Definition

Backside Switch & Button Definition	
<b>SIM Card Slot</b>	For SIM Card Installation, only supports 1.8V/3V SIM Card
<b>Power Switch</b>	For switch ON or OFF the RTU
<b>Upgrade Firmware Switch</b>	For upgrade firmware purpose only. Only when upgrade new firmware version will use it, otherwise keep it at Work Side all the time.
Power Connector Definition	
<b>DC IN+</b>	External DC Power input port, Connect to 1.5A@9~36V DC power, positive electrode.
<b>DC IN-</b>	External DC Power Input port, contact to negative electrode
<b>DC Out+</b>	Power source output port, positive electrode. Provides power from RTU to external transducers or sensors or detectors. The output current should less than the power from DC IN inputs. If adapter current is 2A, then suggest external transducer current to be less than 1.5A
<b>DC Out -</b>	Power source output port, Negative electrode.
DIP Switch Definition	
<b>SET/RUN</b>	For setting the RTU Mode is in Configuration Mode or Run mode. Switch it to upside is Set Mode, under this mode, the user can use PC Configurator via USB cable to configure the RTU Parameters or Read Parameter settings. Switch it to Downside is Run Mode, under this mode, the RTU is in Running mode. <b>Tips:</b> When device mode changed, need to switch off/on the device.
<b>0/V/mA</b>	The 1 <sup>st</sup> channel of analog input type switch. If not use this channel then no matter is upside or downside. Switch it to upside stands for the 1 <sup>st</sup> analog input should connect to 0~5V voltage output



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU


	transducer. Switch it to Downside stands for the 1 <sup>st</sup> analog input should connect to 0~20mA or 4~20mA current output transducer. <b>Tips:</b> <i>The wrong side will cause device can't read the analog value.</i>
1/V/mA~3/V/mA	The 2 <sup>nd</sup> to 4 <sup>th</sup> channel of analog input type switch. If not use this channel then no matter is upside or downside. Switch it to upside stands for the related analog input should connect to 0~5V voltage output transducer. Switch it to Downside stands for the related analog input should connect to 0~20mA or 4~20mA current output transducer.
<b>Analog Input Definition</b>	
Analog inputs, Sampling frequency 200mS, 12bits resolution, supports 0-5V, 0-20mA, 4-20mA output transducers, please refer to above mentioned DIP Switch Definition to connect the correct transducers.	
0+/0-	The 1 <sup>st</sup> Channel Analog input. + stands for positive electrode, - stands for negative electrode.
1+/1- ~3+/3-	The 2 <sup>nd</sup> ~4 <sup>th</sup> Channel Analog input. + stands for positive electrode, - stands for negative electrode.
<b>Digital Input Definition</b>	
Dry contact or wet contact, sampling frequency 200mS. Logic level: 0~0.5V or short circuit treated as close, +3~30V or open circuits treated as open. One of the input can be used as counter, sampling frequency is 1Mhz, the second input can be used for Arm/Disarm.	
0	The 1 <sup>st</sup> digital input, positive electrode.
1~3	The 2 <sup>nd</sup> ~4 <sup>th</sup> digital input, positive electrode.
GND	GND for digital inputs, negative electrode.
<b>ATN Port Connector Definition</b>	
ATN	GSM/3G/4G Antenna connector, 50Ohm, SMA male.
<b>USB Port Connector Definition</b>	
USB	USB port, for configuration and upgrading firmware and exporting historical data;
<b>Temperature Humidity Sensor Port Definitions</b>	
T/H	Temperature & Humidity sensor AM230x input. Measurement Range: Temperature: -40°C to +80°C, Humidity: 0~100%RH.
<b>Digital Solid Relay Output Connector Definition</b>	
Solid Relay inside for outputs, Rated Capacity: 5A/30VDC, 5A/250VAC.	
0+/0-	The 1 <sup>st</sup> Channel Solid Relay Output. + stands for positive electrode, - stands for negative electrode.
1+/1- ~ 3+/3-	The 2 <sup>nd</sup> ~ 4 <sup>th</sup> Channel Solid Relay Output. + stands for positive electrode, - stands for negative electrode.




# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

**S27X wiring diagram**


**AI internal interface principle block diagram**

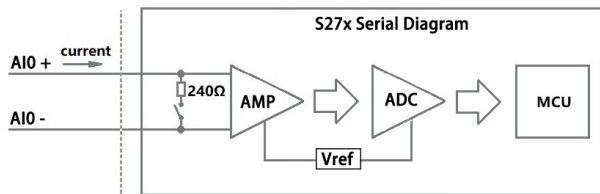

**DI internal interface Principle block diagram :**

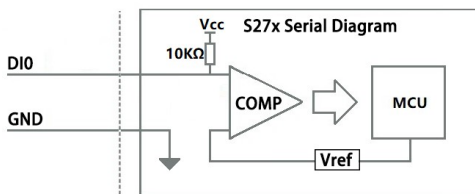



**DO internal interface Principle block diagram :**

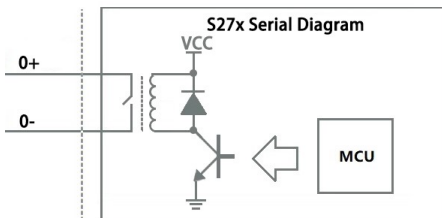

**S27X Wiring:**

**T&H**

**Relay Output**

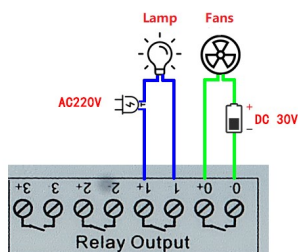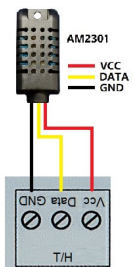





# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

Wet contact input

Dry contact input

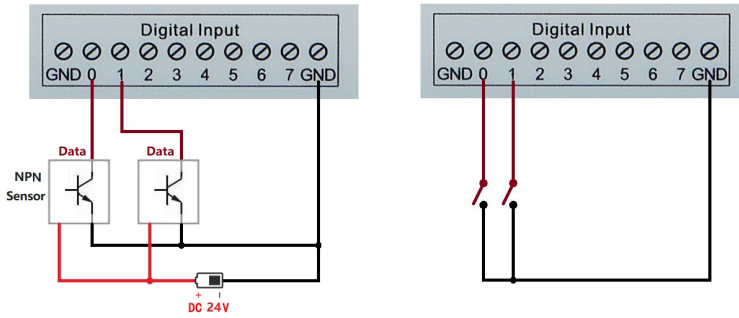


RS485

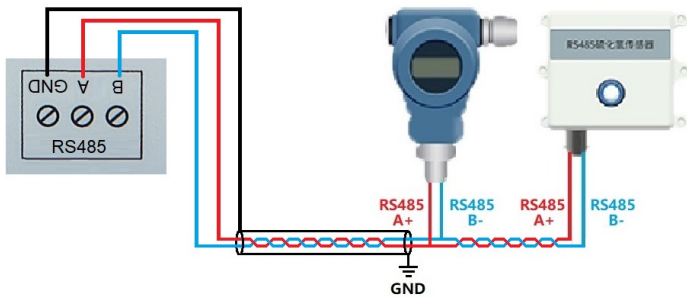

Analog Input

Analog Input

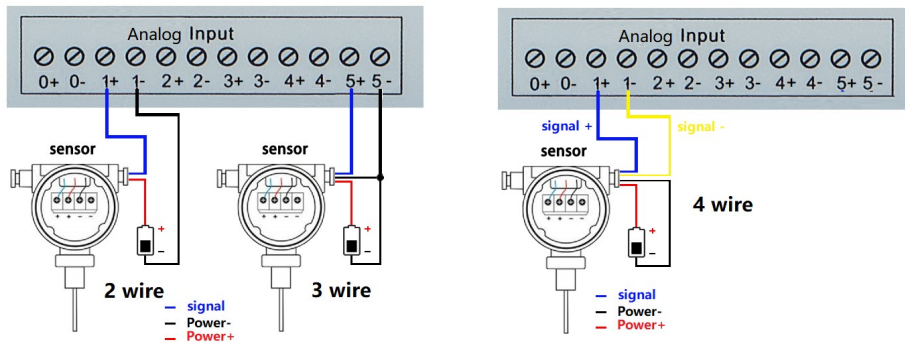

## 6. Settings & Operation

The GSM SMS GPRS 3G 4G Cellular IoT M2M RTU is user-friendly design. The user can setup it or export historic data by the PC Configuration through USB cable, and upgrade firmware by USB port. The GSM SMS GPRS 3G 4G Cellular IoT M2M RTU also can be configured some basically parameters by SMS Commands, please refer to SMS



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

Command App or [SMS Command List](#).

### Tips!

When using an IoT card, it does not support sending and receiving SMS and voice dialing alarm functions, so there is no need to set the content related to SMS; at the same time, when the device need access to the cloud platform server, please disable the SMS alarm and dialing function, otherwise the device will frequent offline due to sending and receiving SMS and dialing

Below is the steps to setup the parameters by PC Configuration, please follow it step by step.

## 6.1 Start to Configure

### Step1: Install the Configurator

Download from [www.iot-solution.com](http://www.iot-solution.com) or scan the QR code card in the package, then installs it on the computer.

### Step2: Connection


Please insert the SIM Card, and install the GSM/3G/4G Antenna.

### Step3: Switch the DIP Switch to Setup Mode. (Before Power On the RTU)


Switch it to upside is Set Mode, under this mode, the user can use PC Configurator via USB cable to configure the RTU Parameters or Read Parameter settings.

#### Notice:

Please switch it to Downside after you finished the configurations. Otherwise, the RTU cannot work properly. The Downside is Run Mode, under this mode; the RTU is in Running mode.

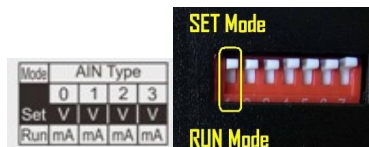

### Step4: Connect the Gateway to the PC by USB Cable. And connect the external DC Power to DC Power Ports, Power on, and switch on the device, see below:




### Step5: Install USB Driver

Install the USB Driver to the computer from [www.iot-solution.com](http://www.iot-solution.com). When successful, it can be found out at the device manager of the XP or Windows 7 or Win8/Win10, please see the below photo. Also, the driver for different OS can be downloaded from Silicon Laboratories, Inc. <http://www.silabs.com>, the model is CP210x.



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

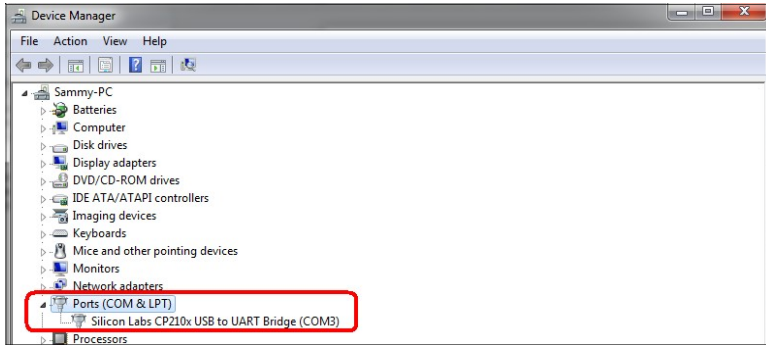


**Step6:** Run the Configurator (Compatible with Windows XP/7/8/10)

**Tips:** In some computer, it required download net framework 4.0 while installation, then please click "Yes" to go to Microsoft website to download this service pack.




Please click to run it. Enter the password, default is 1234. Then you can enter the configuration page as below:

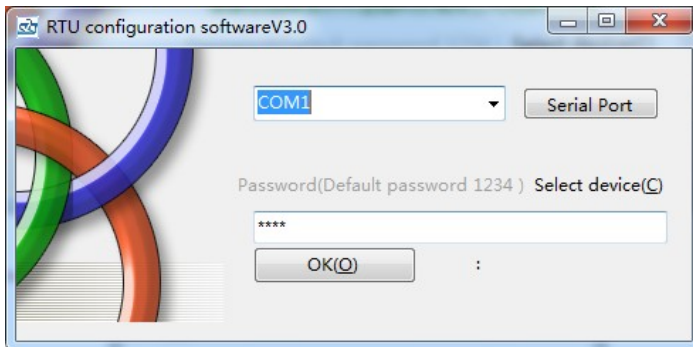

**Notice:**

If display the below windows, then means the RTU connect to the PC failure. The reasons are below:

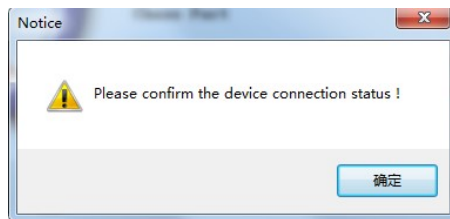

- 1) USB Driver installation failure;
- 2) USB Cable connection is disconnected;
- 3) The DIP Switch in RUN mode, not in SET mode;
- 4) The Upgrade Firmware Switch at Load side, not at Work side.






# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

5) Power Switch switched off or DC Power Connection is disconnected.


**Step7:** Choose the correct "COM port" in device manager above, enter the password(default is 1234),click the "OK" to connect and start to program

Details please check the picture as below:

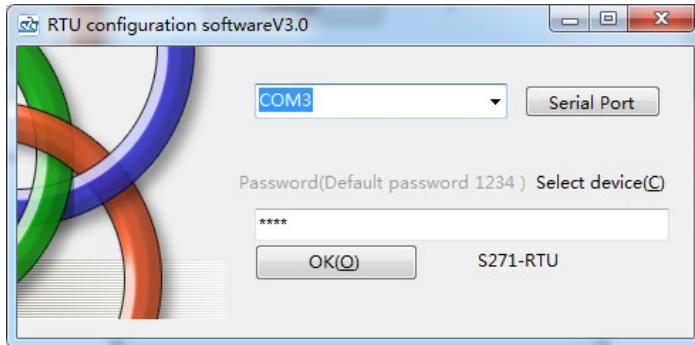

**Tips:** If not connect successfully, will not enter into next step. Pls check if USB connect well, or COM port and password correct or not.

Then select what SIM card do you use.

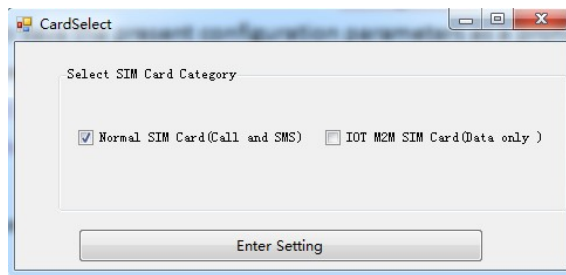

## 6.2 Setting Self-checking

Phenomenon	Possible Reason
<b>Can't enter software</b>	<ol style="list-style-type: none"> <li>1. USB Driver installation failure;</li> <li>2. COM Port not correct or USB driver installation failure;</li> <li>3. Device not enter into setting mode:               <ol style="list-style-type: none"> <li>1) Only power light on, that means the Upgrade Firmware Switch at Load side, not at Work side. Solution: Switch the power switch to OFF----&gt; Upgrade switch to Work side----&gt; Power switch to ON.</li> <li>2) Signal light flicks, that means device in working mode. Maybe had not rebooted the device after switch mode switch to Set. (In setting mode, Power light normal ON, Run light flicks, other lights Off.)</li> </ol> </li> </ol>
<b>After switching panel on, only Power light on, panel can't work</b>	<ol style="list-style-type: none"> <li>1. The Upgrade Firmware Switch at Load side, not at Work side. Solution: Switch the power switch to OFF----&gt;Upgrade switch to Work side----&gt; Power switch to ON;</li> <li>2. SD card fall out from the slot. Solution: Shake panel to listen if there is voice or</li> </ol>




# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

	<p>not;</p> <p>3. In upgrade mode, use upgrade tool erased the firmware.</p>
<b>Can't enter into working mode</b>	<p>1. The Upgrade Firmware Switch at Load side, not at Work side. Solution: Switch the power switch to OFF----&gt;Upgrade switch to Work side----&gt; Power switch to ON;</p> <p>2. Device in setting mode. Solution: Switch device OFF----&gt;Mode switch to "Run"----&gt;Switch the device on.</p>
<b>Can't find COM Port</b>	<p>1. Have not installed driver;</p> <p>2. PC system problem cause driver installation failure, can't support Apple OS system.</p> <p>3. Check USB line, and try other common driver software such as "Drive TheLife".</p>
<b>In working mode, the device not response the Modbus command</b>	<p>Have not set the device ID. Solution: In setting mode, set device ID----&gt;Switch the device to Run mode.</p>
<b>After switching panel on, not running according to parameter setting</b>	<p>After parameter setting, forget to click "Save" button in every page. Solution: Back to Set mode----&gt;Click "Save" Button after setting one page----&gt;After all page set successfully, click "Save Setting" in the menu.</p>

## Terms usually used by Cellular IoT M2M RTU

Cellular IoT RTU, Modbus RTU, Modbus Slave, Modbus RTU Over TCP, Modbus TCP, Arm, Disarm...

## 6.3 Configurator software interface and running

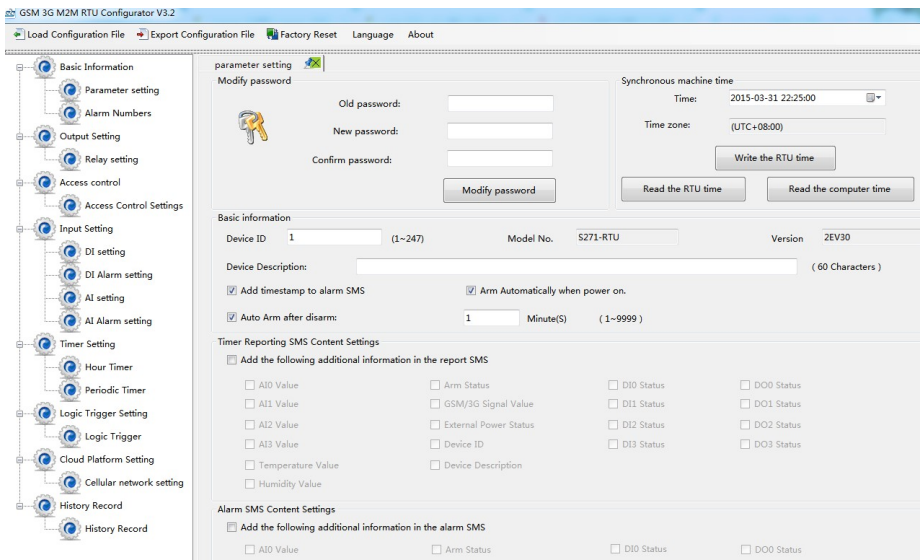

**Save :** Click it to save all of the PC Configurator parameters to the RTU;

**Load Configuration file:** Click it to load additional configuration file to the Configurator;

**Export Configuration file:** Click it to save the present configuration parameters as a profile for next RTU



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

configuring or backup the parameter settings.

**Tips:** The load and export configuration file is very useful while you need to program bulks of RTU with similar parameters.

After programmed the first unit then you can export profile to save it, for the second RTU then you can load profile directly to save you time.


**Factory Reset:** Click it to recovery the parameters to factory defaults.

**Notice:**

1. After setting or revising parameter, need to click the "Save" button of this page, then click "Save Settings" in menu for saving parameters in device
2. Before S270/S271 export configuration, need to read Slaves configuration details first, to avoid Slaves information missing.
3. Easy way to revise parameter: Open parameter setting page---->Click "Read" button to get device current value  
---->Revise and click "Save" button---->Click the "Save Settings" button in the menu.
4. Switch the device mode to "Run" as below, otherwise it will not work;



5. Reboot the device, switch the Power Switch to OFF, then switch it to ON, the device will enter into normal running mode after that

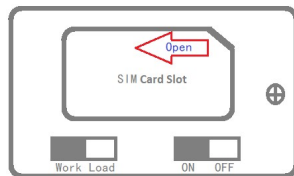


## Basic Settings

**Reminder:**

1. Please click the "Read" for previous parameter before starting to set.
2. When accessing the cloud platform, the [Automatic report item] and [Alarm SMS setting] items may not be set.



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

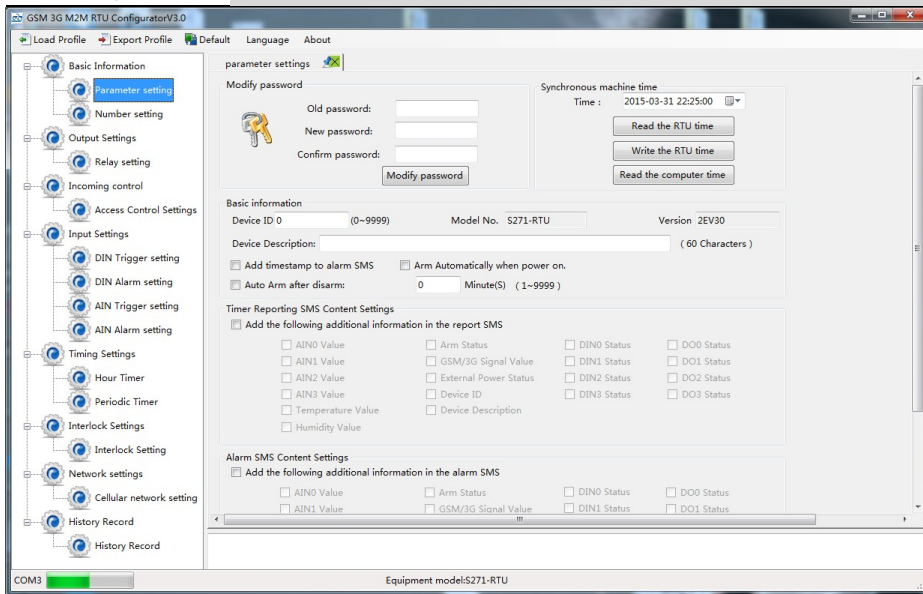

**Modify Password:** This is for modifying the RTU's Password, default is 1234.

**Synchronous device time:** This is to setup the RTU's time for daily report or other timers. After click **Write the RTU Time**, the RTU will be synchronous the same time as the PC. If connect to King Pigeon Cloud Server, no need this step.

**Device ID:** Non-necessary. This is mainly for monitoring center to identify the RTU; If communicate via Modbus protocol, device ID only can be 1~247.

**Device description:** This is the description of the RTU, e.g.: installation address, usage instructions and so on.

**Add Timestamp to Alarm SMS:** Tick it stands for while alarm occurrence, the Alarm SMS will include the RTU'S current time information at the SMS Content.

**Arm automatically when Power On:** Tick it stands for once the RTU powered up, the RTU will enter into Arm Mode automatically.

**Auto Arm after Disarmed:** Fill the timeout to enter into Armed Mode automatically after disarmed operation. This is useful for security protection applications.

**Tips:**

**Arm:** Under this mode, any alarm occurrence will send SMS and dial the authorized numbers immediately. And execute the programmed I/O outputs.

**Disarmed:** Under this mode, alarm occurrence will not send SMS & dial the authorized numbers.

**Timer Reporting SMS Content Settings:** Tick the related items to add its value/status to the Timer report SMS contents.

**Alarm SMS Content Settings:** Ticks the related items to add its value/status to the Alarm SMS Contents.

## **Number Settings**(If access the cloud platform, no need to set)


This is to setup the Authorized User Telephone Numbers to receive the Alarm SMS or dial. Tick it stands for while the related event alarm occurrence will send SMS to this number.



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

### Reminder:

When using an IoT card, it does not support sending and receiving SMS and voice dialing alarm functions, so there is no need to set the content related to SMS; at the same time, when the device wants to access the cloud platform server, please disable the SMS alarm and dialing function, otherwise the device will Sending and receiving SMS and dialing leads to frequent offline.

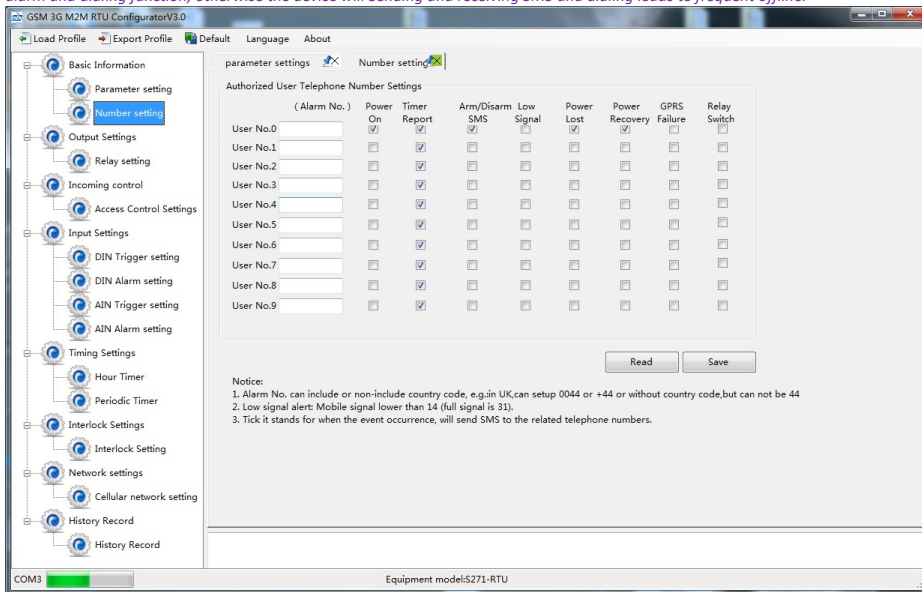

**Power On:** Tick it stands for while the RTU powered up, will automatically send SMS to this number, include device model, version, description, IMEI, status, signal value etc...

**Timer Report:** Tick it stands for Timer report SMS will send to this number.

**Arm/Disarm:** Tick it stands for Arm or Disarm the RTU, will send SMS to this number.

**Low Signal:** Tick it stands for while GSM/3G/4G Network signal strength lower than 14 will send SMS to this number.

**Power Lost:** Tick it stands for while external DC Power loss will send SMS to this number.

**Power Recovery:** Tick it stands for while external DC Power recovery, will send SMS to this number.

**GPRS Failure:** Tick it stands for while GPRS connection re-try 3 times and still failure will send SMS to this number.


**Relay Switch:** Tick it stands for while the Digital Solid Relay Output action will send SMS to this number.

## Output Settings

This page is to setup the Output parameters and definite the output usages. The outputs will be used in the Interlock Page for programmable logic events.



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

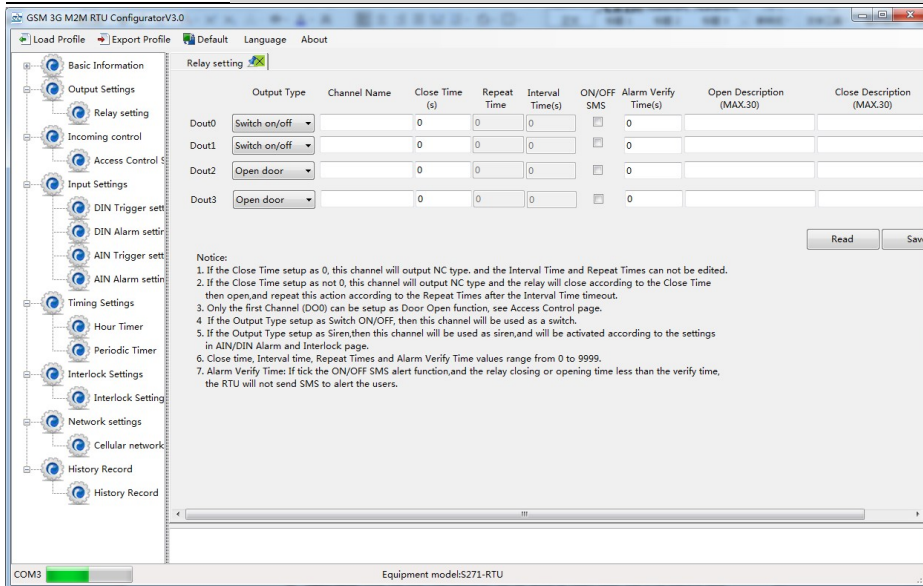

**Output Type:** Support 3 output types. The user can choose the Output Type for the relay outputs, includes Open Door, Switch ON/OFF,Siren. The relay 2 and 3 only used for Switch ON/OFF; Relay 0 can option as Open Door and Switch ON/OFF; Relay 1 can option as Siren and Switch ON/OFF.

- 1) **Open Door:** Only the first Channel(DO0) can be setup as Open Door, use it for electric lock. If setup as Open Door, then the authorized number calls in RTU, can open the electric Lock directly or output a pulse signal and disarmed the RTU directly. See **Access Control** page about the authorized number.

**Notice:**

*If relay 0 used for Open Door, then can't be action as normal Switch ON/OFF.*

**Application:**

*When RTU installed in generator room, many workers out and in, not convenience and safe for everyone taking keys. This function can authorize the person to remotely control the door and disarm the device within appointed time, avoid fault anti-thief alert. After worker maintenance the generator room, can touch the inside Arm/Disarm switch button to arm device, DIN2 can do this.*

- 2) **Switch ON/OFF:** For switch on/off device.
- 3) **Siren:** This is for output pulse signal for siren sounds, If setup as Siren, then while the RTU alarm and ticked the Siren function in AIN or DIN trigger pages, then this channel will execute the setting parameters.

**Channel Name:** to setup the Output Channel name, e.g.: Pump or Motor and so on, in order to identify it in SMS Contents.

**Close Time:** Stands for the relay close and last time, default 0 second, means always close.

**Repeat Times:** Stands for how many times does this relay should to repeat.

**Interval Time:** Stands for interval how many seconds then the relay repeat the action again.



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

Match with "Repeat Times" can work as pulse output, unit: second.

**ON/OFF SMS:** Tick it stands for while the Recovery action, will also send SMS to the authorized numbers;

**Alarm Verify Time(s):**Stands for when the Relay Close or Open last time less than this value, will not send SMS to the authorized numbers, this is to avoid sending too many useless SMS.

**Open Description:** Stands for when the Relay Open, send what SMS to the authorized numbers;

**Close Description:** Stands for when the Relay Close, send what SMS to the authorized numbers.


## **Incoming Control Settings**(If access the cloud platform, no need to set)

This page is for setting which authorized number at what time can dial to the RTU and let the first channel (DO0) output a pulse output.

Only when the output types of the first channel (DO0) setup as **Open Door** can dial to control it.

It is very useful for serviceman dial to open the electric lock door and disarmed at specified time of the Room. Also this function can be used as authorized number dial in the RTU to output a pulse output or always close then call again open the relay at specified time. In this condition, please setup the output type of DO0 as **Open Door**, and setup other parameters correctly, and remember to setup the **Auto Arm after Disarmed** time as 0 to keep the RTU in Armed Mode if required.

Tick the box ahead the User No. stands for enable the first Authorized number can dial in to let the first channel (DO0) output a pulse output.

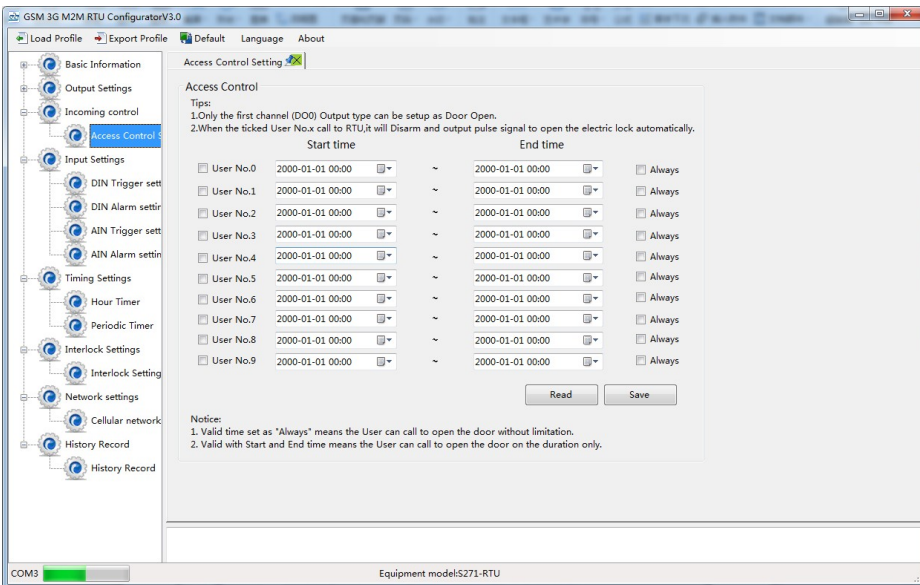

**Start Time:** Stands for from what time this authorized number can dial in to control it.

**End Time:** Stands for till what time this authorized number cannot dial in to control it.

**Always:** Stands for this authorized number can dial in to control it all the time.

## **DI Trigger Settings**(If access the cloud platform, no need to set)

Note:When accessing the cloud platform, no need to set [Alarm SMS Content], [Restore SMS Content], [Displacement SMS Content], [Interval Pulse Alarm Content] and [Total Pulse Count Alarm]



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

DIN trigger setting

Input Type	Alarm SMS	Recovery SMS	Change SMS	Current Status	Recovery Alarm	Alarm Verify Time(s)	Siren	24hr
DIO	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>	0	<input type="checkbox"/>	<input type="checkbox"/>
DI1	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>	0	<input type="checkbox"/>	<input type="checkbox"/>

DIOCounter	Initial Value	Interval Alarm Value	Interval SMS Alarm Content	Total Alarm Value	Total Alarm Message Content
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	(MAX.999999)

DI1Counter	Initial Value	Interval Alarm Value	Interval SMS Alarm Content	Total Alarm Value	Total Alarm Message Content	Anti-jitter Time
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	(MAX.999999)	10 ms (MAX.2000)

Notice:

1. S270 Only DIO-1 can be used as Pulse Counter, S270 Only DIO-3 can be used as Pulse Counter.
2. Only DI1 can be used as Arm/Disarm Switch.
3. Alarm Verify Time: active and last this time then considered as alarm.
4. Siren: In armed mode, active then drive the Siren channel to work. Must setup one of the output channel as Siren type.
5. 24Hr Any time, active will arise alarm.
6. Alarm verify time values range from 0 to 9999.

Read Save

**Input Type:** The user can choose the input type for related channel. Includes: Counter, Arm/Disarm, NC, NO, Change and Disabled.

- 1) **Disabled:** Not use this channel.
- 2) **NC:** For connecting Normal close type detector, open will alarm.
- 3) **NO:** For connecting normal open type detector, close will alarm.
- 4) **Change:** For connecting normal open or normal close type detector, once the status changed, will be treated as alarm.
- 5) **Counter:** DIO as a high-speed pulse counter, sampling frequency: 1MHz; DI1~3 as low-speed pulse counter, anti-shake time can be set 1~2000ms, default 1ms; Need to tick up the Pulse Counter box to setup initial value and interval alarm value and total alarm value. E.g.: contact a PIR sensor to count how many people pass through the ATM machine and so on.
- 6) **Arm/Disarm:** Only the Second Channel (DI1) can be used as Arm/Disarm Switch. For connecting a pulse output type switch to Arm or Disarmed the RTU.

**Alarm SMS:** Under Arm or 24h status, once triggered will send this SMS content to authorized numbers.

**Recovery SMS:** Under Arm or 24h status, if tick the "Recovery Alarm", when triggered digital input recovery normal will send this SMS content to authorize number.

**Change SMS:** Under Arm or 24hr status, only when digital input choose "Change" type, once action will send this SMS to authorize number.

**Current Status:** Stands for input's current status.

**Alarm Verify Time:** Stands for when the digital input Close or Open last time more than this value, will be treated as a true alarm, if less than this value, then will not alarm.

**Siren:** Tick it stands for while this digital input triggering, the DO that output type was setup as Siren will execute its output parameters.

**24Hr:** Tick it stands for no matter the RTU is in Arm or Disarmed mode, this digital input triggered will alarm.

**Initial Value:** When DIO as counter, the value begin to count.

**Interval Alarm Value:** DIO as counter, under Arm or 24hr status, when counter value arrive "Interval Alarm Value" will send SMS to authorize number.

**Total Alarm Value:** When counter value arrive "Total Alarm Value", will automatically refresh it to "Initial Value". Under Arm or 24hr status, will call and SMS to authorize number.

**Interval Alarm SMS:** When interval alarm, will send this SMS to authorize number.

**Total Alarm SMS:** When arrive total max value, will send this SMS to authorize number.






# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU



## DI/AI Alarm Settings (If access the cloud platform, no need to set)

This page is for setup while DIN/AIN alarm, send SMS & Dial to which authorized numbers. Tick it stands for enable to send SMS or dial the related authorized number, see below page is for DIN settings, the AIN Alarm Settings is the same:

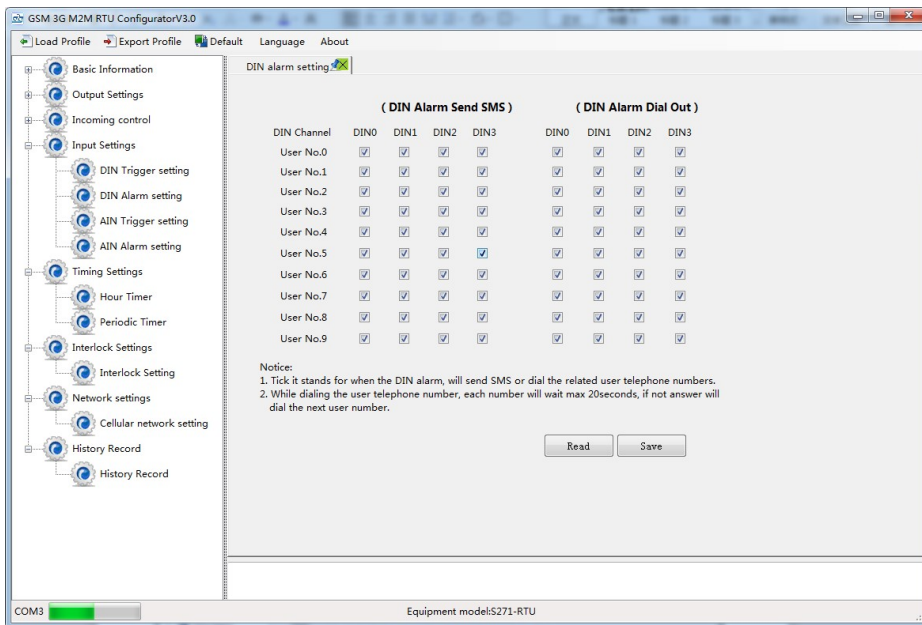


## AI Trigger Settings

This page is to setup the analog input alarm conditions and analog input parameter. AIN can be used for monitoring temperature, current, voltage, power factor, water level, pressure, environment, wind speed... And also one channel temperature and humidity transducer can be connected as below:

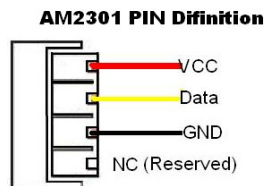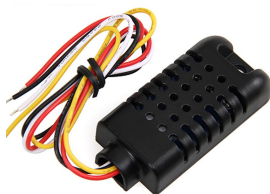



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

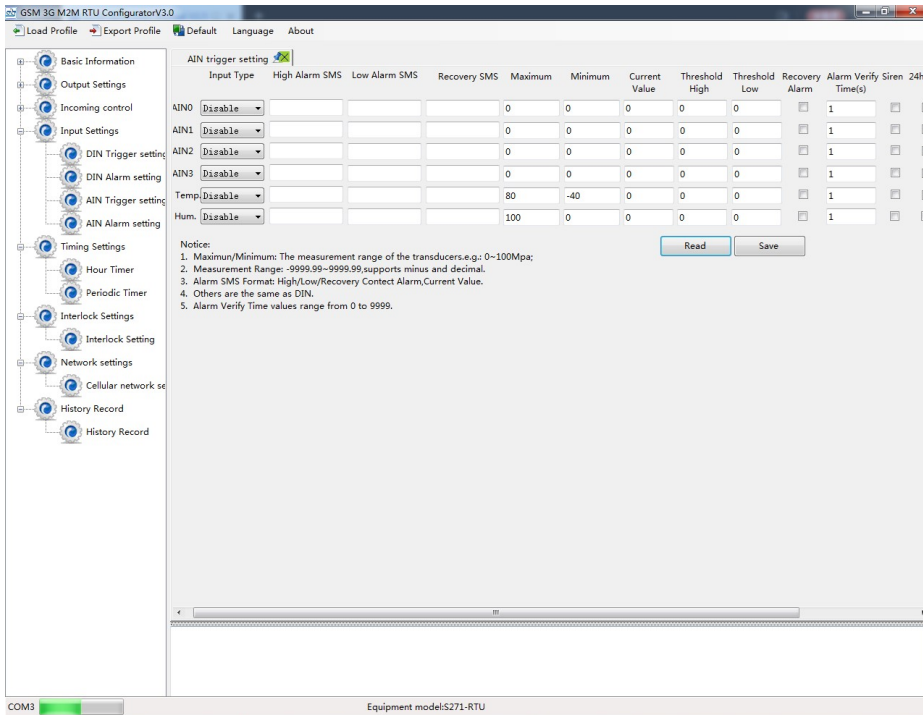

**Input Type:** The user can choose the input type for related channel. Includes: Disable, 0~5V, 0~20mA, 4~20mA.

- 1) **Disabled:** Not use this channel.
- 2) **0~5V:** For connecting transducers that output voltage 0~5V. Please remember to switch the related channel DIP switch to V side, see **DIP Switch Definitions**.
- 3) **0~20mA:** For connecting transducers that output current 0~20mA, Please remember to switch the related channel DIP switch to A side, see **DIP Switch Definitions**.
- 4) **4~20mA:** For connecting For connecting transducers that output current 0~20mA, Please remember to switch the related channel DIP switch to A side, see **DIP Switch Definitions**.
- 5) **Temperature and Humidity:** Enable/Disable support. Only accept AMS230x series sensor, the temperature maximum is 80, minimum is -40, and Humidity maximum is 100, minimum is 0, cannot change them.

**High Alarm SMS:** Under Arm or 24h status, once current value higher than threshold high value will send this SMS content to authorized numbers.

**Low Alarm SMS:** Under Arm or 24h status, once current value lower than threshold low value will send this SMS content to authorized numbers.

**Recovery SMS:** Under Arm or 24h status, if tick the "Recovery Alarm", when current value recovery normal will send this SMS content to authorize number.

**Maximum:** The transducer's maximum measure range. E.g.:100 Celsius degree. Usually it can be found out at the transducer's specification.

**Minimum:** The transducer's minimum measure range. E.g : -50 Celsius degree. Usually it can be found out at the transducer's specification.



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

**Current Value:** Stands for input's current value of the transducers.

**Threshold High:** The high value(reached) need to alarm; Example: set 50Celsius degree to alert.

**Threshold Low:** The low value(reached) need to alarm; Example: set -30Celsius degree to alert.

**Recovery Alarm:** Tick it stands for when the analog input recovery, will send SMS to the authorized numbers.


**Siren:** Tick it stands for while this input triggering, the DO that output type was setup as Siren will execute the its output parameters.

**24Hr:** Tick it stands for no matter the RTU is in Arm or Disarmed mode, this input triggered will alarm.

**Reminder:1) According to the output type of the transmitter, set the correct mA and V type on the DIP switch of the device, please see 2.3 Mode Selection and 2.3 AI Wiring Diagram; 2) The same input type should be set in the configuration software; 3) The maximum and minimum range of the analog quantity, please refer to the transmitter technical specification to fill in, or consult the transmitter manufacturer**

## Timer Settings

This page is for setup hour timer and periodically timer, it is useful for scheduling when to execute what action automatically or it with repeat this action according to the interval time. Total can program 10 scheduling events. Tick it stands for enable this timer event:

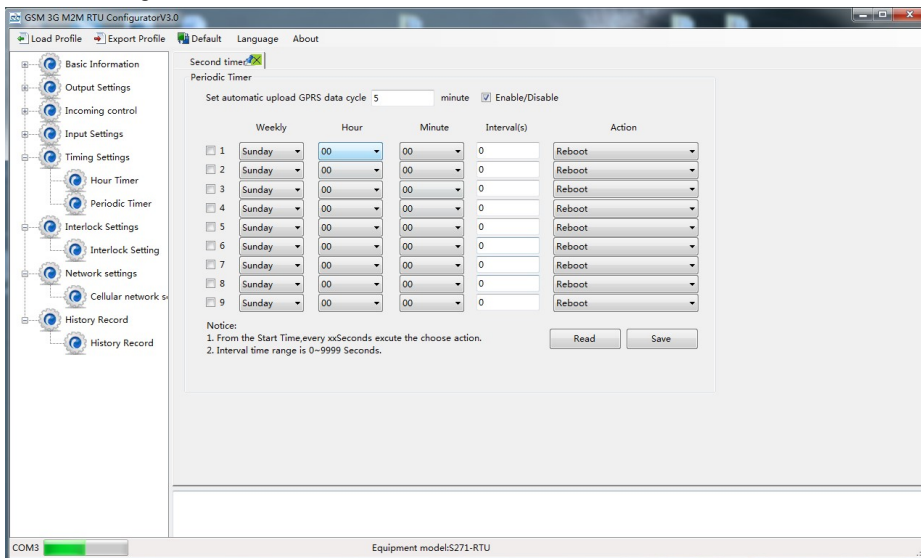

**Reminder:**

When GPRS/3G/4G data transmission protocol is King Pigeon IoT RTU Protocol, the periodically auto upload default enable and upload every 5 minutes.

Tick stands for enable this timer function, otherwise is disable.

**Weekly+Hour+Minute:** Stands for what day and at what time does the RTU should start to execute the action and interval how many seconds then repeat to execute the action.

**Interval:** Stands for interval how many seconds does the RTU should repeat to execute the action. If setup it as 0, then this event will not be repeated.

**Action:** Stands for what action does the RTU should to execute at the specified time.




# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

**Question:** Have set the timer SMS report, but finally not get the SMS.

**Solution:** Have no ticked the "Timer Reporting SMS Content" in first Basic Parameter Settings page.

## Logic Trigger Settings

This page is for setup if what happen, then what action does the RTU should execute, it is a programmable logic events. Total can program up to 40 logic events for automatically control purposes.

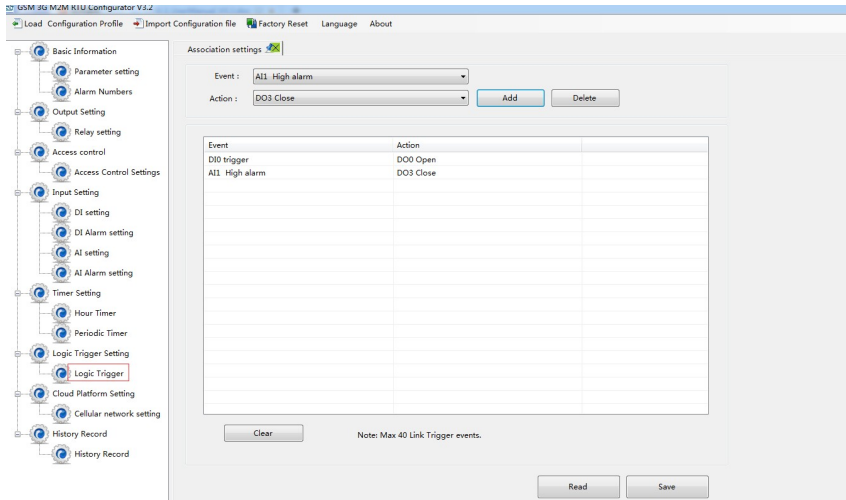

**Event:** Stands for if this occurrence.

**Action:** Stands for then what action does the RTU should execute.

## Network Settings

This page used for setting device parameters connect to networks. The device can compatible with many third party upper computer system. And it can communication with monitoring software or cloud via GPRS/3G/4G as below:

- 1) Modbus RTU Protocol, means Modbus RTU over TCP, commucation with upper computer system. For example, connect to www.kpiiot.com cloud server. Domain: modbusrtu.kprtu.com, Port: 4000.
- 2) Modbus TCP Protocol, commucation with upper computer system. For example, connect to www.my-m2m.com cloud server. Domain: modbus.dtuip.com, Port: 6655.
- 3) MQTT Protocol, connect to www.my-m2m.com cloud server. Domain: modbus.dtuip.com, Port: 6655.



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

Association settings GPRS settings

Connect KPIIOT Connect my-m2m Connect other IOT

Communication Protocol Modbus RTU Prot Server 1 IP/DNS modbusrtu.kpirtu.com (Max60)

Protocol TCP Server Listen Port 4000 (0-65535)

Access Point Name (Max60) Server 2 IP/DNS (Max60)

User Name (Max60) Server Listen Port (0-65535)

Password (Max60) Server connection strategy Prefer server 1

Pis fill in the login message(device ID of cloud),and click save

Login Message ASCII (Max60)

Login ACK Message ASCII (Max60)

Logout Message ASCII (Max60)

Heartbeat Message ASCII req (Max60)

Heartbeat ACK Message ASCII res (Max60)

Heartbeat Interval 60 (1-9999)

No Response Resend Times 3 (1-9)

Login Message Strategy Send Once When Login Server

FAQ for settings please refer to [Help] menu

Read Save

hint

Click this button to fill in the login message, please contact the King Pigeon sales representative .  
Tel: +86 755-29451836 Request for login message  
After filling in the login message, click save and restart the device to access it

Note:if connect to KPIIOT or my-m2m cloud,only need ask King Pigeon sales for log in message,other part no need fill,keep as default.

**Communication Protocol:** "Disable", "Modbus RTU protocol", "IoT RTU protocol" or "Modbus TCP protocol" "MQTT"optional.

**Protocol:** TCP or UDP optional.

**Access Point Name:** APN, cellular operator provide.

**User Name:** User Name,operator provide.

**Password:** Network password, operator provide.

**Sever 1/2 IP/DNS:** Server IP address or DNS.

**Listen Port:** Stands for the server's listen port.

**Server Connection Strategy:** Only support "Prefer server 1" function, no "Both connection" now. When server 1 disconnect, will connect to server 2 automatically.

**Login Message:** Server register handshake protocol package. When transparent transmission or Modbus protocol, this item used for device ID, provided by cloud. Contact King Pigeon sales if need to connect www.kpiiot.com cloud server.

**Login ACK Message:** Once set, device need response within 10 seconds after device send login message, otherwise it will continue send login message according to "Reconnection Times", still not response will offline once time, then try to reconnect, according to "Server Offline 3 Times, Device Reconnection Time".

**Logout Message:** Once server send to device, device will be offline.

**Heartbeat Message:** Heartbeat content to avoid network offline.

**Heartbeat ACK Message:** Once set, device need response within 6 seconds after device send heartbeat message, otherwise it will continue send login message according to "Reconnection Times", still not response will offline once time, then try to reconnect, according to "Server Offline 3 Times, Device Reconnection Time".


**Heartbeat Interval:** Network keep online heartbeat interval time.

**No Response Resend Times:** After setting heartbeat and login message, if server no response, the times which server will send data.

**Login Message Strategy:** "Send Once When Login Server", "Plus It In Front Of Every Packet", "Both Of Them" optional. "Plus It In Front Of Every Packet" when data transmission.



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

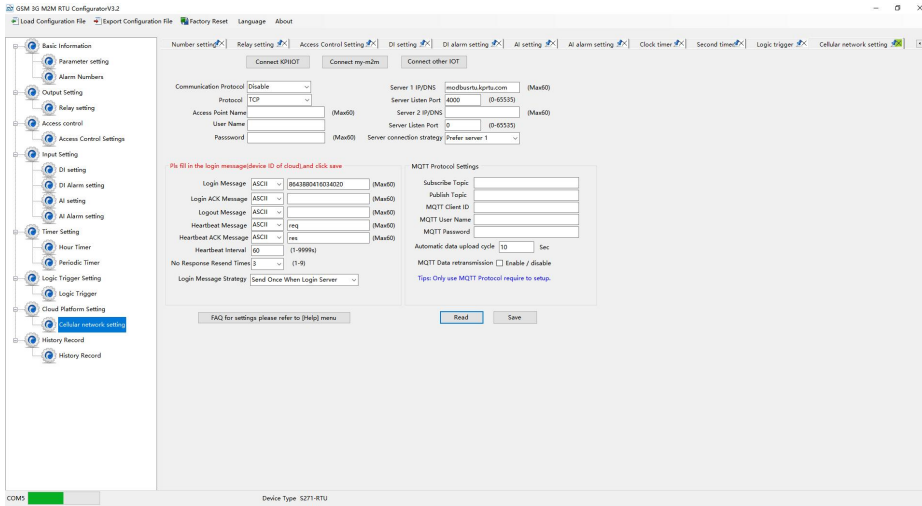

MQTT Settings@ Network setting		
Item	Description	Default
Subscribe topics	Topic subscribed when the device receives control data	empty
Publish topic	Topic when the device publishes information	empty
Mqtt device ID	Serial number of the device, unique identification	empty
Mqtt user name	The account of the device to publish the theme on the proxy server	empty
Mqtt password	The device publishes the password for the subject at the proxy server	empty
Active upload data cycle	The time interval for the device to upload data regularly, with a maximum of 10 seconds	10 seconds
Mqtt data supplementary transmission	When enabled, the historical cache data during network disconnection will be retransmitted when the network is restored	Disable


## Historical Record

The device inbuilt 8G SD card, store alarm and historical records. For saving historical records, need to set the saving historical records interval time in "Periodically Timer" page.

For historical record, once it full, will automatically remove the earlier records for new records. And can save as CS format for other purpose usage.



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

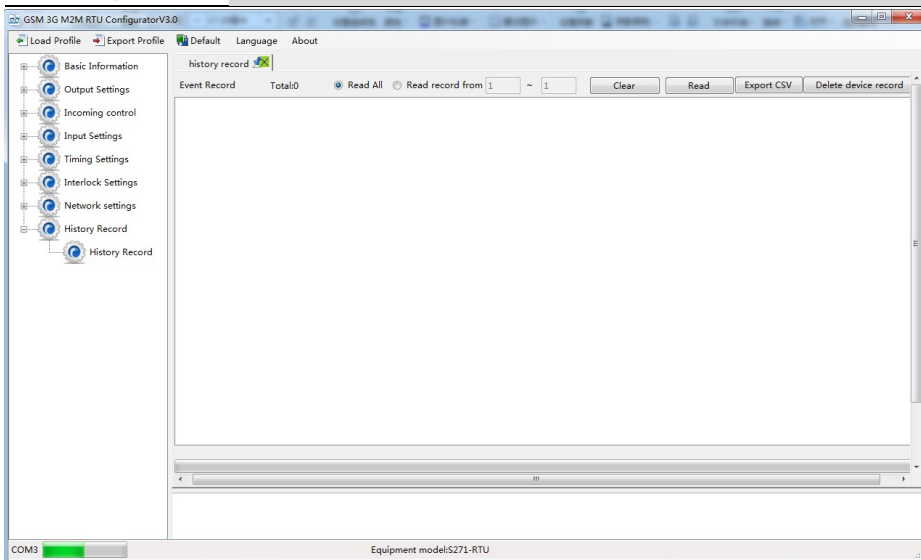

**Total:** Display device current historical records qty, "Read All" or "Read Record from xx to xx" optional.

**Clear:** Clear the screen.

**Read:** Read historical records.

**Export CSV:** Historical records export as CSV file.

**Delete device records:** Click this button will erase all device historical records, be careful.


## 7. Example Of Applications

### 7.1 Device working self-checking


(1) Under setting mode, switch Dip to "Set"---->Switch device on---->Running configurator, choose port and password enter into software basic parameter settings---->Click "Read the computer time"---->Then click "Write the RTU time" for device time setting. At the same time, tick "v" for "Arm automatically when power on", then click "Save" button as below:



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

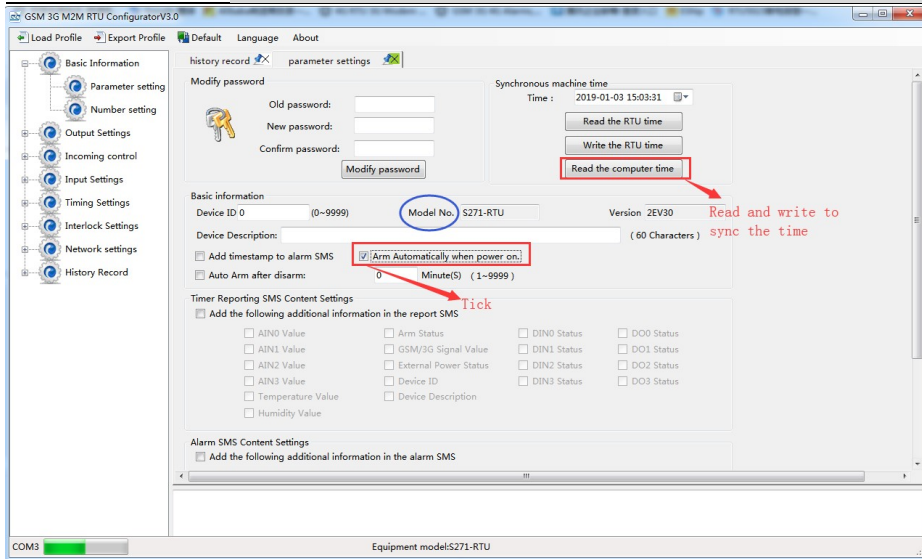

(2) Under "Number Settings" page, write authorize number and tick the times needed. For example, if need power on, external power off/recovery SMS, then tick and write as below:

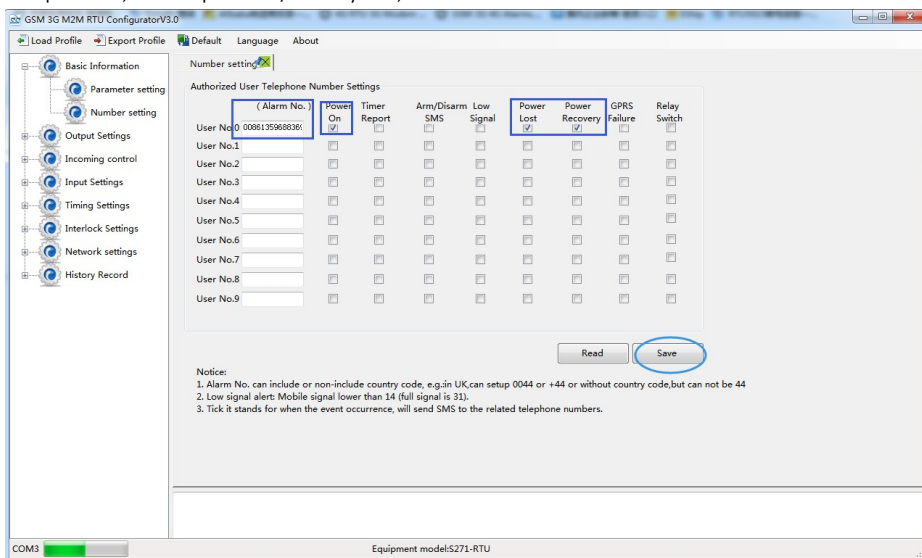

(3) Click "Save"---->Switch device off---->Switch working mode to "Run"---->Put it SIM card and switch device on. 1~2 min after SIM card register network, power on SMS should be received---->The cut the external power, the power lost SMS should be received---->Connect the power support to device again, then power recovery SMS should be received. Thus, the device communication self-checking finished.







# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

## 7.2 Device connect analog transducer

If AIN0 need to connect a temperature transducer, transducer output 4~20mA signal, measurement range: -40~100℃, when temperature last 2 seconds higher than 35℃ need to alarm, last 2 seconds lower than 20℃ also need a alarm, then set as below:

Mode	AIN Type			
	0	1	2	3
Set	V	V	V	V
Run	mA	mA	mA	mA

- (1) Switch device off, then switch AIN0 input type to "mA";
- (2) Wire connect temperature transducer to AIN0 input as below:

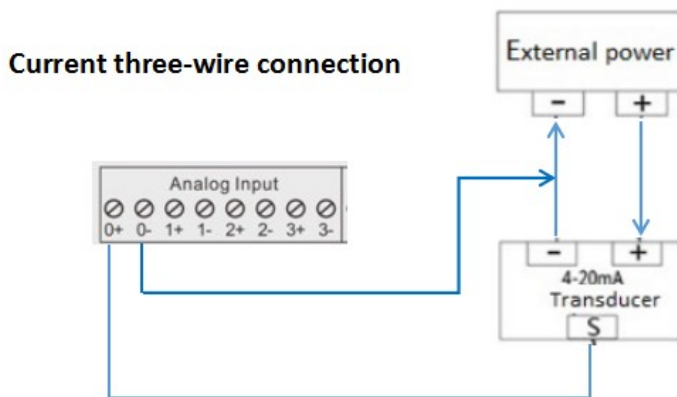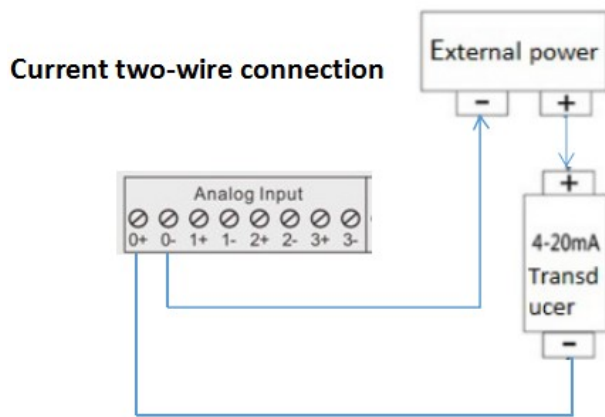


- (3) Basic setting according (1) and (2) in "Device working self-checking";
- (4) Enter into "AIN Trigger" page---->Set input type to "4~20mA"---->Write "High/Low Alarm SMS"---->"Maximum": 100, "Minimum": -40, "Threshold High": 35, "Threshold Low": 20, "Verify Time": 2. If still need recovery alarm SMS, then need to tick "Recovery Alarm", and write content in "Recovery




# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

SMS"---->After that, click "Save" as below:

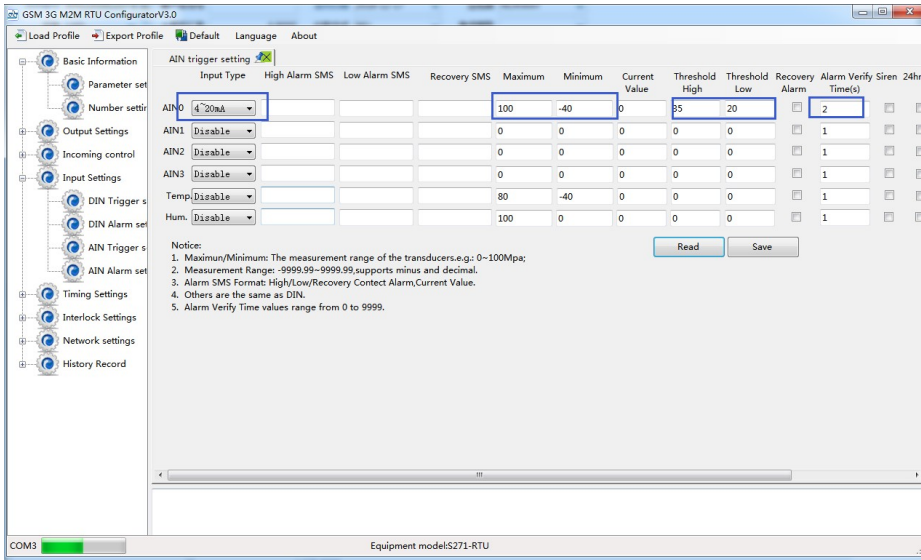


(5) In "AIN alarm setting" page, tick the corresponding items for authorize number. For example, when AIN0 alarm, will can and send SMS to authorize number "0", remember to click "Save" as below:

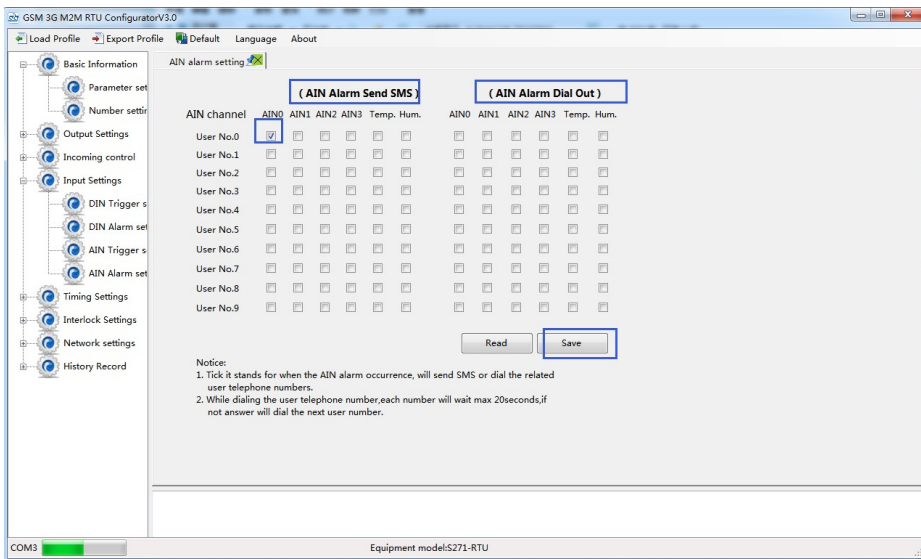

(6) Switch device off;

(7) Switch DIP mode to "Run", working mode as below:





# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU


(8) Switch the device on, then device enter into working mode.

### Application:

When monitoring cabinet temperature, if higher than 38°C, need to start the cabinet fan; If lower than 25°C, need to close the fan.


Need: Temperature/Humidity transducer AM2301 and 1 channel relay output, if choose the first relay DO0, the set as below:

(1) Switch device off---->connect temperature/humidity transducer to T/H port---->connect the cabinet fan to DO0 output as below:

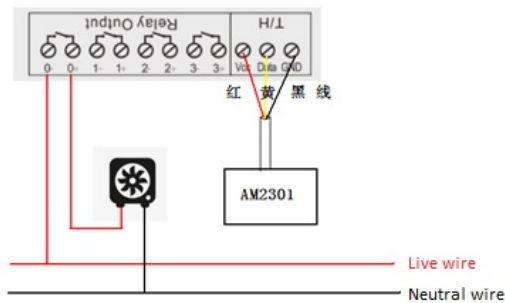

(2) Basic setting according (1) and (2) in "Device working self-checking";

(3) In "Output Settings" page, set first relay DO0, output type: Switch on/off, channel name: cabinet fan, close time: 0, 0 means always close. Click "Save" button as below:

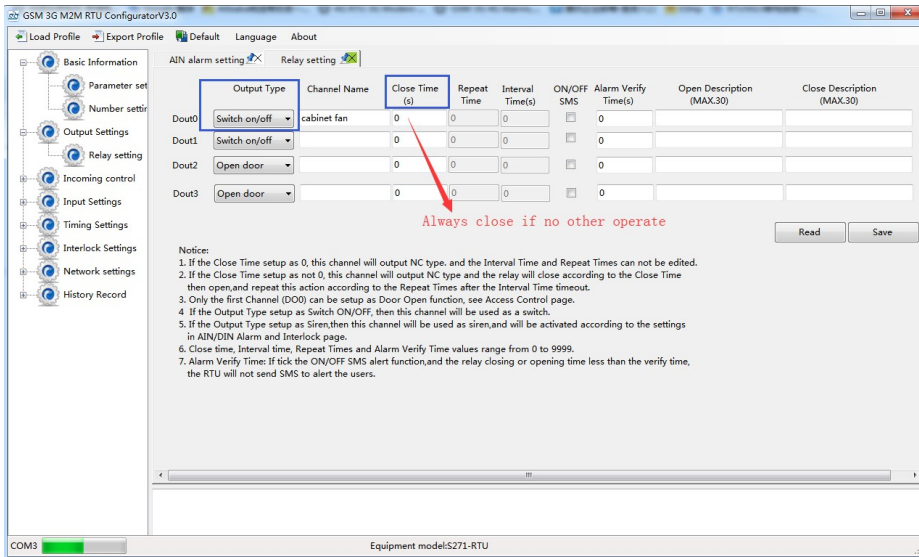


(4) In "AIN Trigger Setting" page, set temperature type "Enable"---->Humidity and AIN0~7 choose "Disable" if not use---->Set corresponding alarm SMS content---->Threshold high: 38 and Threshold low: 25---->Recovery




# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

and verify time according to need---->Click "Save" button as below:

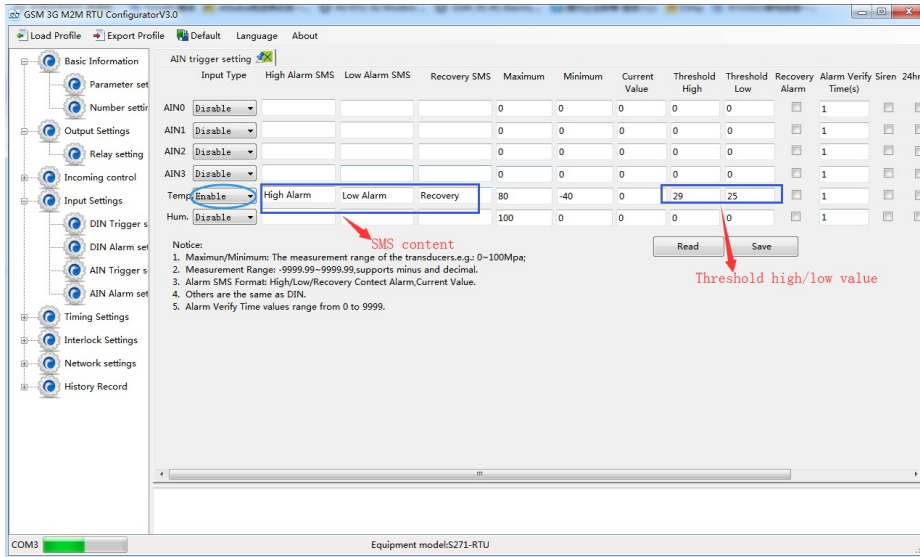

(5) In "Interlock Settings" page, Event choose "Temperature high alarm", Action: "DO0 close"---->Click "Add" button, stands for when temperature high than 38 °C, device will close DO0 to start the cabinet fan; Same operate for low alarm setting, then temperature lower than 25 °C, device will open DO0 to close the fan automatically---->Click "Save" button as below:

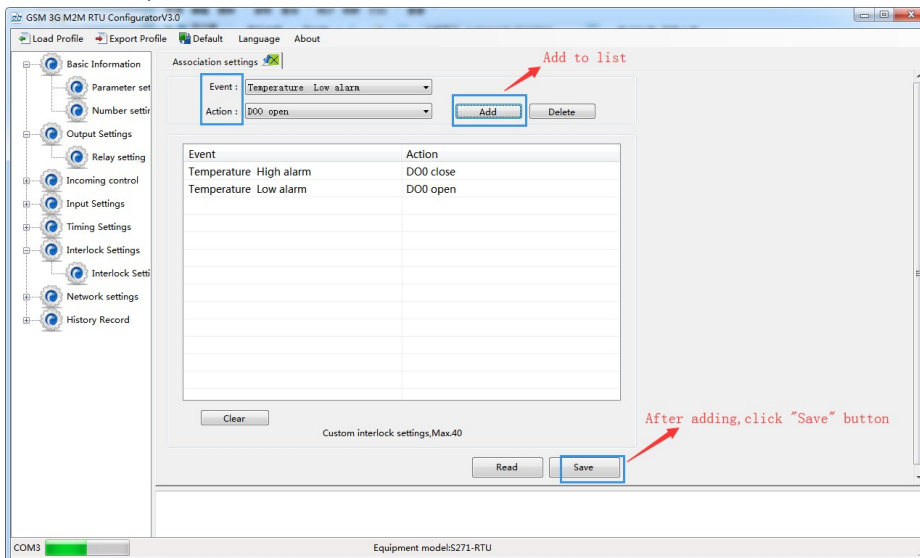

(6) Switch device off;



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

(7) Switch the DIP mode to "Run";

(8) Switch the device on, enter into working mode.


## 7.3 Cloud configuration, wechat notify application

Device can connect to cloud and SCADA via GPRS/3G/4G network, also can connect to clients own server and King Pigeon [www.My-M2M.com](http://www.My-M2M.com) cloud server. King Pigeon [my-m2m.com](http://my-m2m.com) cloud as sample below:

King Pigeon my m2m cloud support Modbus TCP, cloud configuration, wechat alarm function, welcomed editable function.

(1) Basic setting according (1) and (2) in "Device working self-checking";

(2) In "Basic Parameter" setting page, set device ID, range 1~247 in Modbus RTU protocol as below:

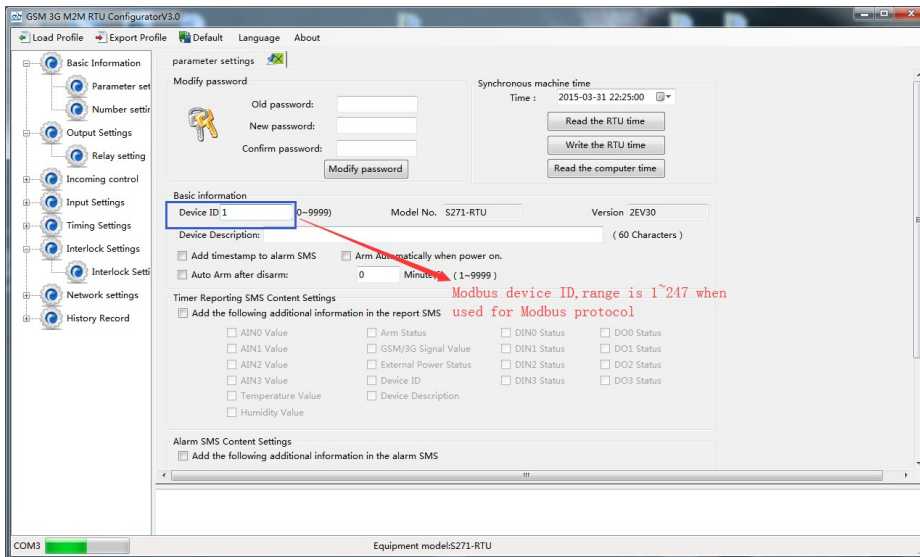

(3) In "Cellular network setting" page, set parameter as below:


When Communication Data as "Modbus RTU Protocol", then server IP/DNS should be: [modbus.dtuip.com](http://modbus.dtuip.com), port is 6651, pls contact King Pigeon Sales for "Login Message Writing";

When Communication Data as "Modbus TCP Protocol", then server IP/DNS should be: [modbus.dtuip.com](http://modbus.dtuip.com), port is 6655, pls contact King Pigeon Sales for "Login Message Writing";

When Communication Data as "King Pigeon RTU/Definition Protocol", then server IP/DNS should be: [rtu-m2m.com](http://rtu-m2m.com), port is 8001, pls provide device IMEI to King Pigeon Sales.



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

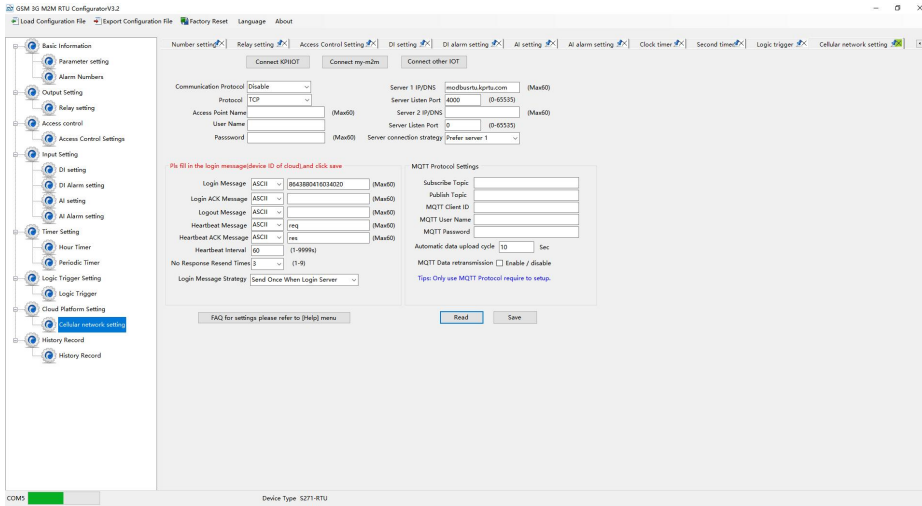

- (4) Switch device off.
- (5) Switch the DIP mode to "Run".
- (6) Switch the device on, enter into working mode, then device I/O can connect to network.

## 8. Device SMS Command and SMS APP

The user can send SMS commands to setup or operate the device, also can use the APP to control it easier. The APP is under SMS communication, but their makes the program and operation easier than edit SMS every time.

The Android APP search "M2M RTU" or click to download link:  
<http://nc-apk.wjcdn.com/9/c8/1fd8e70a8634e9b4763a6a7114888c89.apk>

The IOS APP search "M2M RTU" or click to download link (IOS 7.0 version or above support):  
<https://itunes.apple.com/us/app/gsm-3g-m2m-rtu/id1095288504?l=zh&ls=1&mt=8>


Or can scan QR code below:



SMS APP interface as below:



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

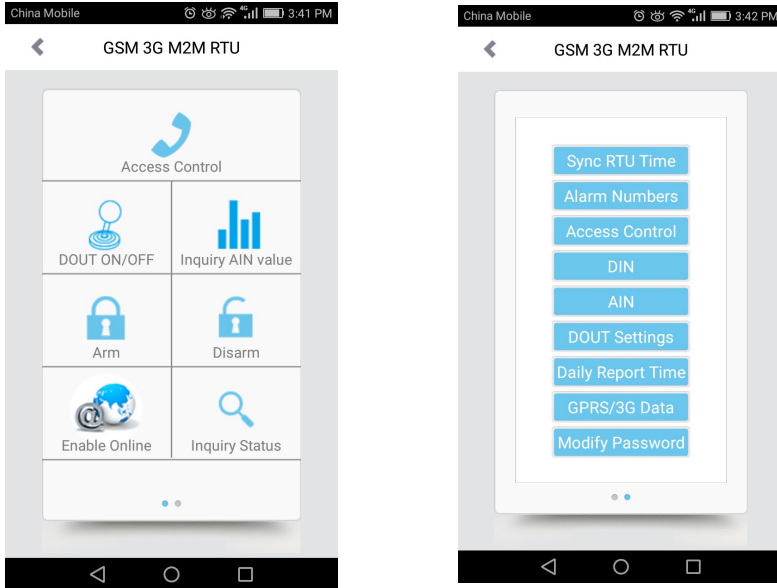

## SMS Command List:

The SMS commands will be used for remote control the RTU are below:

### 1) Commands error return SMS

Event	Return SMS Content
Any incorrect Command	SMS Format Error, Please check Caps Lock in Command!

### 2) External DC Status

Event	Return SMS Content
External DC goes off	External DC Power Goes OFF
External DC Power Goes ON	External DC Power Goes ON

### 3) Modify Password, 4digits, default is 1234

SMS Command	Return SMS Content
Old Password+P+New Password	This is the New Password, please remember it carefully.

### 4) Arm/Disarm SMS Command

SMS Command	Return SMS Content	
Arm	password+AA	Armed
Disarm	password+BB	Disarmed

### 5) Set RTU time, format is 2015-05-22 15:20:30W01, the W01 stands for Monday, W07 stands for Sunday.

SMS Command	Return SMS Content
password+Dxxxx-xx-xxTxx: xx: xxWxx	xxxx(Y)XX(M)XX(D)xx(H)X(M)xx(W)

### 6) Inquiry Current Status SMS Command

SMS Command	Return SMS Content
password+EE	Armed/Disarmed Model: Version:



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

	IMEI: GSM Signal Value: External DC Power Goes OFF/ON
--	---

7) **Setup 10 User number**(Alarm Number&Access Control Number), max 21digits. ( Return 0~4 or 5~9 separately while setting.)

SMS Command		Return SMS Content
Setup	password + A + series number + T + tel number  <b>Notice:</b> Series number = 0~9	Tel1: --- Tel2: --- Tel3: 13570810254 Tel4: --- Tel5: ---
Inquiry	password+A	Return all numbers
Delete	password+A+series number	Return 0~4 or 5~9 numbers.

8) **Authority User Number to access control:** authorized number can dial to disarm and open the door.

SMS Command		Return SMS Content
Setup	<b>Specified access control time:</b> password + B + series number + S + start time + E + endtime  <b>Always can access control:</b> password + B + series number + P  <b>Notice:</b> Time format is 201505231230, stands for year, month, date, hour, minute.	Tel1: --- Tel2: --- Tel3: 13570810254 Tel4: --- Tel5: ---
Inquiry	password+B	Return all authorized user numbers
Delete	password+B+series number	Return all authorized user numbers

9) **Setup Daily Report time**

SMS Command		Return SMS Content
Setup	password+DR+series number+T+time  <b>Notice:</b> Series number =0~9, e.g.: 1234DR1T12:30	Daily SMS Report at: xx:xx
Inquiry	password+DR	
Delete	password+DRDEL	

10) **Inquiry DIN Status**

SMS Command		Return SMS Content
Inquiry Status	password+DINE	DIN1:Open/Close DIN2: Open/Close -----

11) **Setup AIN Name**

SMS Command		Return SMS Content
Set Threshold	password+AINR+channel number+Lxxx+Hxxx	AINx: Low:xxx,High:xxx.
Inquiry Threshold	password+AINR+ channel number<nnnnnnnn>	AINx: Low:xxx, High:xxx. AINy: Low:xxx, High:xxx.
Delete Threshold	password+AINR+ channel number+DEL	
Set AIN measurement range	password+AINM+ channel number+Lxxx+Hxxx	AINx: Min:xxx,Max:xxx
Inquiry measurement range	password+AINM+ channel number<nnnnnnnn>	AINx: Min:xxx, Max:xxx. AINy: Min:xxx, Max:xxx.





# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

Delete measurement range	password+AINM+channel number+DEL	
Inquiry AIN Current Value	password+AINE+channel number<nnnnnnnn>	AINx: xxxx ,+【 Normal/Higher/Lower 】
Inquiry All AIN Current Value	password+AINE	AIN0: xxxx ,+【 Normal/Higher/Lower 】 AIN1: xxxx ,+【 Normal/Higher/Lower 】 ----

### 12) SMS Control Digital Output

SMS Command	Return SMS Content
Set DO Name	password+DO+channel number+T DOx:xxxx
Inquiry DO Name	password+DO+ channel number<nnnn>
Delete DO Name	password+DO+ channel number+DEL
Switch ON(Close)	password+DOC+ channel number<nnnn> , can close multi channel, till next event trigger or SMS command. DOx: ON DOy:ON
Switch OFF(Open)	password+DOO+ channel number<nnnn> DOx: OFF DOy:OFF
Inquiry DO Current Status	password+DOE+ channel number<nnnn> DOx: ON/OFF DOy:ON/OFF
Inquiry all DO Current Status	password+DOE DO1: ON/OFF DO2:ON/OFF ---
Time Switch ON (Close)	password+DOLC+ channel number<nnnn> , can close multi channel, till time setting in configurator software finished.
Set Pulse Output time	password+DOT+xxx (3 digital, unit is seconds) Pulse Output Time:xxxS
Inquiry pulse output time	password+DOT Pulse Output Time:xxxS
Pulse Ouput	password+DOP+channel number<nnnn> No SMS Return

### 13) Set Server Parameter (Can not setup DNS by SMS)

SMS Command	Return SMS Content
Set Server IP	password+IP+ IPaddress+P+Com port Server: Port:
Inquiry	password+IP
Delete	password+IPDEL

### 14) Set GPRS APN/USER NAME/PASSWORD

SMS Command	Return SMS Content
Set	password+AP+apn#+username#+userpassword APN:
Inquiry	password+AP User Name:
Delete	password+APDEL Password:

### 15) GPRS Online

SMS Command	Return SMS Content
password+GPRSONline	GPRS always online

### 16) Delete Historical Data

SMS Command	Return SMS Content
password+HISDEL	Delete all historical records

### 17) Clear/Inquiry Pulse Counter Value




# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

	SMS Command	Return SMS Content
Clear Pulse Counter Value	password+DINOCLR	Clear Successfully
Inquiry Pulse Counter Value	password+PR	Counter Current Value: XX


## 9. Device GPRS/3G/4G Communication Protocol

Device can connect to Cloud and SCADA via GPRS/3G/4G network, support Transparent Transmission, Modbus RTU over TCP, Modbus TCP and King Pigeon RTU protocol. User also can connect device to third party cloud or server.

### 9.1 Device Networks Topology

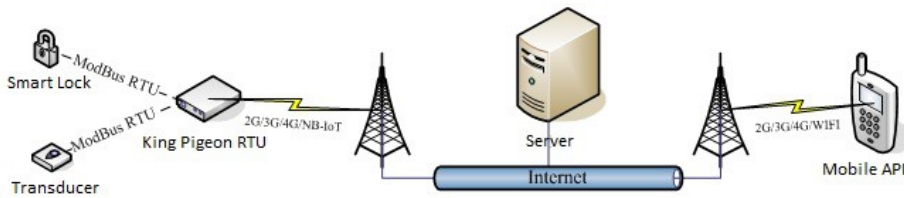

### 9.2 Communication Networks

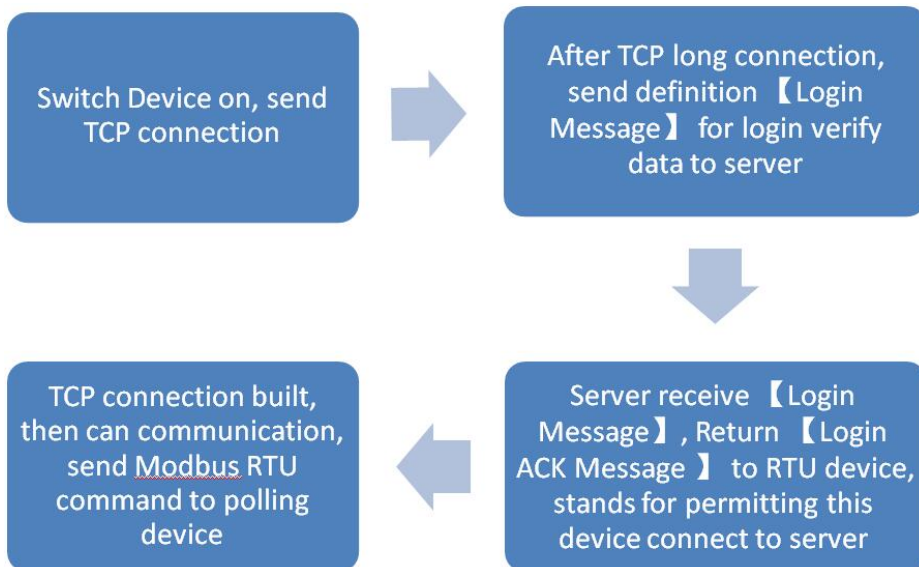



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

## ⚙️ S270/S271 RTU I/O Register List and Function Code

Read Input Coil (Function Code 02: Read Coil)		
Register Address (Decimal)	Definition	Description
0	RTU DIN0	DIN0 value, when dry contact, NC=1, NO=0; When wet contract, 0~0.5V=1, 3~24V=0
1	RTU DIN1	DIN1 value, when dry contact, NC=1, NO=0; When wet contract, 0~0.5V=1, 3~24V=0
2	RTU DIN2	DIN2 value, when dry contact, NC=1, NO=0; When wet contract, 0~0.5V=1, 3~24V=0
3	RTU DIN3	DIN3 value, when dry contact, NC=1, NO=0; When wet contract, 0~0.5V=1, 3~24V=0

Read Input Register (Function Code 4: Read Input Register.)			
Register Address (Decimal)	Definition	Data Type	Description
0	RTU AIN0	32 Bit Signed ABCD 2 Byte in Modbus protocol	AIN0 value, real value= AIN0 value/100
2	RTU AIN1		AIN1 value, real value= AIN1 value/100
4	RTU AIN2		AIN2 value, real value= AIN2 value/100
6	RTU AIN3		AIN3 value, real value= AIN3 value/100
8--13	(reserved, not work)	...	...
14	RTU Power	16 Bit Unsigned AB 1 Byte in Modbus protocol	External power voltage, real value= Power value/100
15--23	(reserved, not work)	...	...
24	RTU Temperature	16 Bit Signed AB 1 Byte in Modbus protocol	AM2301 Temperature value (*100), real value= Temperature value/100
25	RTU Humidity	16 Bit Signed AB 1 Byte in Modbus protocol	AM2301 Humidity value (*100), real value= Humidity value/100.
26	RTU DIN0 Count Value	32 Bit Unsigned	This value Enable when DINO as counter mode
28	TU DIN1 Count Value	32 Bit Unsigned	This value Enable when DINO as counter mode



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

30	TU DIN2 Count Value	32 Bit Unsigned	This value Enable when DINO as counter mode
32	TU DIN3 Count Value	32 Bit Unsigned	This value Enable when DINO as counter mode

### Read and Write Holding Coil (Function Code 1, Function Code 5, Function Code 15.)

Register Address (Decimal)	Definition	Data Type	Description
0	RTU DO0	Bool	DO0 Value, Read/Write, 1=Close, 0=Open
1	RTU DO1	Bool	DO1 Value, Read/Write, 1=Close, 0=Open
2	RTU DO2	Bool	DO2 Value, Read/Write, 1=Close, 0=Open
3	RTU DO3	Bool	DO3 Value, Read/Write, 1=Close, 0=Open


### Read and Write Holding Coil (Function Code 03, Function Code 06, Function Code 16.)

Register Address (Decimal)	Definition	Data Type	Description
260(bit0)	DIO Count clear bit	Bool	Write 1 to clear DIO count
260(bit1)	DI1 Count clear bit	Bool	Write 1 to clear DI1 count
260(bit2)	DI2 Count clear bit	Bool	Write 1 to clear DI2 count
260(bit3)	DI3 Count clear bit	Bool	Write 1 to clear DI3 count



## GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

### 9.3 Message communication sequence

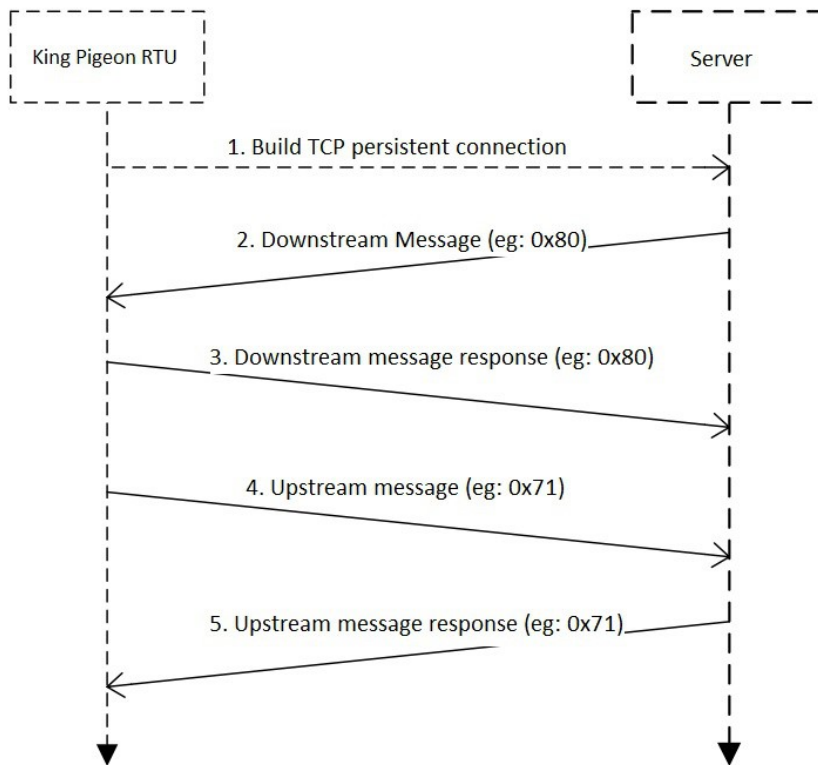

### 9.4 King Pigeon IoT RTU Protocol/ Definition Protocol

If users need device send alarm data, or timely send data to server, can choose this communication protocol. Set "Communication Data" in "Cellular network setting" page, need to choose "King Pigeon RTU/Definition protocol", "Protocol" choose TCP, set the Domain/IP/Port of connecting server, other parameter setting according to server.

**Notice:**

1) When Modbus TCP or Modbus RTU over TCP communication protocol adopted, device used as Internet remote server or slave device of cloud. So device ID is necessary for server polling device address data, and Internet remote server and cloud used for Modbus Master function.

2) When Modbus TCP or Modbus RTU over TCP communication protocol adopted, cloud server can remotely read and write device register address, according to "[S270/S271 RTU I/O Register List and Function Code](#)".



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

## 9.5 Modbus TCP Protocol


Device can connect to server or cloud to build TCP connection automatically via GPRS/3G/4G networks. After building TCP connection, server or SCADA or cloud can send Modbus TCP command to device for Modbus TCP communication.

## 9.6 Modbus RTU Over TCP

After device switched on, automatically connect to server or cloud to build TCP connection via GPRS/3G/4G networks. Users can set handshake protocol, login message, heartbeat or other parameter according to cloud server. After TCP connection, server or SCADA or cloud can send Modbus RTU command to device, to build Modbus RTU networks which based on TCP connection.

For Modbus RTU over TCP protocol, setting as below:


(1) In "Basic Parameter" setting, set device ID, range 1~247 in Modbus RTU protocol, click "Save" as below:

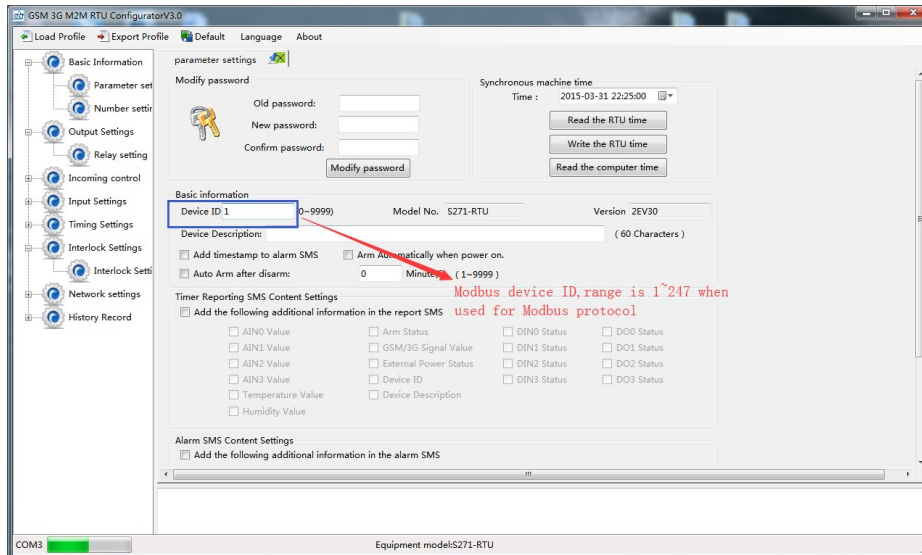

(2) In "Cellular network setting" page, "Communication Data" choose "Modbus RTU Protocol", means communication with Modbus RTU over TCP. After setting server IP/DNS and other parameter, click "Save" button as below:



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

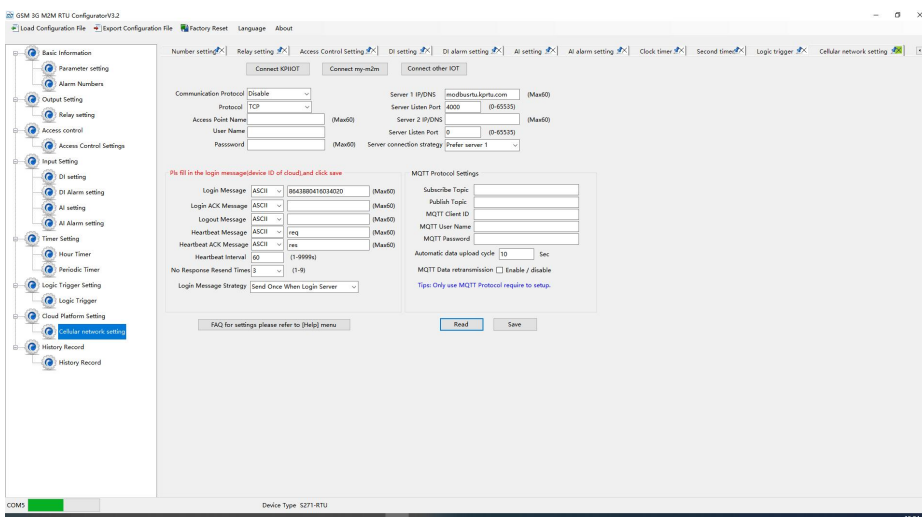

设置格式[Administrator]: 缩进: 左侧: 0 毫米

- (4) Switch device off.
- (5) Switch the DIP mode to "Run".
- (6) Switch the device on, enter into working mode, then device I/O can connect to network via Modbus RTU protocol.

## 9.7 Modbus RTU over TCP Communication Application

Modbus RTU over TCP communication protocol application, server as Modbus (RTU) Master, device as Modbus (RTU) slave. If device ID is 1, and already connected to remote cloud server via GPRS/3G/4G networks.

### Read device relay DO status:

Device's relay DO register address as holding coil, address 0~3, refer to "[S270/S271 RTU I/O Register List and Function Code](#)".

### Master Send Data Format:

Content	Bytes	Data (H: HEX)	Description
Device Address	1	01H	01H Device, Range: 1-247, according to setting address
Function Code	1	01H	Read holding coil type, function code 01
DO Origin Register Address	2	00 00H	Range: 0000-0003, address refer to " <a href="#">S270/S271 RTU I/O Register List and function code</a> "
Read DO Register Qty	2	00 04H	Range: 0001H-0004H, Read DO qty
16CRC Verify	2	3D C9	CRC0 CRC1 low byte in front, high byte in behind

### Receiver Return Data Format:



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

Content	Bytes	Data (H: HEX)	Description												
Device Address	1	01H	01H Device, according to the data Master send												
Function Code	1	01H	Read holding coil												
Return Byte Length	1	01H	Return Data Length												
Returning Data	1	02H	02H means 4 DO status, high 4 byte invalid, low 4 Byte 2 converter Binary as below												
			<table border="1" style="width: 100%; text-align: center;"> <tr> <th>DO3(bit3)</th> <th>DO2 (bit2)</th> <th>DO1 (bit1)</th> <th>DO0 (bit0)</th> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>0</td> </tr> <tr> <td>Open</td> <td>Open</td> <td>Close</td> <td>Open</td> </tr> </table>	DO3(bit3)	DO2 (bit2)	DO1 (bit1)	DO0 (bit0)	0	0	1	0	Open	Open	Close	Open
			DO3(bit3)	DO2 (bit2)	DO1 (bit1)	DO0 (bit0)									
			0	0	1	0									
Open	Open	Close	Open												
Device current relay status: DO0,DO2,DO3 = Open, DO1= Close															
16CRC Verify	2	D0 49H	CRC0 CRC1 low byte in front, high behind												

Example: Read 4 relays DO0~DO3 status, device address as 1 :

**Server send:** 01 01 00 00 00 04 3D C9

01H= Device address; 01H= Read relay function code; 00 00H= Read starting relay DO0 address; 00 04H= Read serial 4 DO status; 3D C9H CRC= Verify.

**Device answer:** 01 01 01 02 D0 49

01H= Device address; 01H= Read relay function code; 01H= Return data byte qty; 02H= Returning data, stands for Binary 0000 0010 high 4 byte invalid, low 4 byte 0010, sort as DO3 DO2 DO1 DO0 status, D0 49HCRC verify. If read DO or multi DO status, only need to revise " DO Origin Register Address " and " Read DO Register Qty ", calculate the CRC again, returning data according to description data.

### Control device DO output:

#### 1) Control 1 channel device DO output

### Master Send Data Format:

Content	Bytes	Data (H: HEX)	Description
Device Address	1	01H	01H Device, Range: 1-247, according to setting address
Function Code	1	05H	Write single holding coil type, function code 05
DO Register Address	2	00 00H	Range: 0000-0003, stands for DO0-DO3
Active	2	FF 00H	This value: FF 00H or 00 00H, FF 00H= Close relay, 00 00H= Open relay
16CRC Verify	2	8C 3AH	CRC0 CRC1 low byte in front, high behind

### Receiver Return Data Format:





# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

Content	Bytes	Data (H: HEX)	Description
Device Address	1	01H	01H Device, according to the data Master send
Function Code	1	05H	Write single holding coil type, function code 05
DO Register Address	2	00 00H	Range: 0000-0003, stands for DO0-DO3
Active	2	FF 00H	This value: FF 00H or 00 00H, FF 00H= Already actived close relay, 00 00H= Already actived open relay
16CRC Verify	2	8C 3AH	CRC0 CRC1 low byte in front, high behind

Example: Control relay DO0 close, then:

**Server send:** 01 05 00 00 FF 00 8C 3A

01H= Device address; 05H= Control single relay command; 00 00 H DO0= Address; FF 00H= DO0 close; 8C 3A H16 byte CRC verify.

**Device answer:** 01 05 00 00 FF 00 8C 3A

01H= Device address; 05H= Control single relay command; 00 00 H DO0= Address; FF 00H= Active DO0 close; 8C 3AH 16 byte CRC verify.

If single control other relay outputs, only need to change "DO Register Address" and "Active", calculate CRC verify again.

## 2) Multi control DO outputs

### Master Send Data Format:

Content	Bytes	Data (H: HEX)	Description												
Device Address	1	01H	01H Device, according to setting address												
Function Code	1	0FH	Write multi holding coil												
DO Starting Register Address	2	00 00H	Range: 0000-0003, stands for DO0-DO3												
Control Relay Qty	2	00 04H	Qty: 0-4												
Write Byte Qty	1	01H	Write 1 byte, since device only 4DO, use 4 binary can do it												
Writing Data	1	0FH	0FH stands for 4 DO status, high 4 byte invalid, low 4 byte F converter to binary as below <table border="1" style="margin: 5px auto;"> <thead> <tr> <th>DO3(bit3)</th> <th>DO2 (bit2)</th> <th>DO1 (bit1)</th> <th>DO1 (bit0)</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">1</td> <td style="text-align: center;">1</td> <td style="text-align: center;">1</td> <td style="text-align: center;">1</td> </tr> <tr> <td style="text-align: center;">Active close</td> <td style="text-align: center;">Active close</td> <td style="text-align: center;">Active close</td> <td style="text-align: center;">Active close</td> </tr> </tbody> </table> 1= Active close, 0= Active open	DO3(bit3)	DO2 (bit2)	DO1 (bit1)	DO1 (bit0)	1	1	1	1	Active close	Active close	Active close	Active close
DO3(bit3)	DO2 (bit2)	DO1 (bit1)	DO1 (bit0)												
1	1	1	1												
Active close	Active close	Active close	Active close												
16CRC Verify	2	7E 92H	CRC0 CRC1 low byte in front, high behind												

### Receiver Return Data Format:



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

Content	Bytes	Data (H: HEX)	Description
Device Address	1	01H	01H Device, according to setting address
Function Code	1	0FH	Write multi holding coil
DO Register Address	2	00 00H	Range: 0000-0003, stands for DO0-DO3
Active Relay Qty	2	00 04H	Qty: 0-4, stands for how many relays already activated
16CRC Verify	2	54 08H	CRC0 CRC1 low byte in front, high behind

Example: Close device 4 DO at same time, then:

**Server send:** 01 0F 00 00 00 04 01 0F 7E 92

01H= Device address; 0FH= Control multi relay; 00 00H= Relay DO0 starting address; 00 04H= Control 4 relays; 01H= Send data qty; 0FH= Data sent converter to binary 0000 1111 high 4 byte invalid, low 4 byte 1111 sort to match DO3 DO2 DO1 DO0, 1 stands for close relay, 7E 92H CRC verify.

**Device answer:** 01 0F 00 00 00 04 54 08

01H= Device address; 0FH= Control multi relay; 00 00H= Relay DO0 starting address; 00 04H= Activated 4 relays; 54 08H CRC verify.

If need to control multi relays at same time, only need to change "Relay Starting Address", "Control Relay Qty", "Write Data" and calculate "CRC Verify" again.

**Read device DIN status:**

**Master Send Data Format:**

Content	Bytes	Data (H: HEX)	Description
Device Address	1	01H	01H Device, Range: 1-247, according to setting address
Function Code	1	02H	02 read input coil DIN status
DIN Register Address	2	00 00H	Range: 0000-0003, stands for DIN0-DIN3
Read DIN Register Qty	2	00 04H	Read qty of DIN status
16CRC Verify	2	79 C9H	CRC0 CRC1 low byte in front, high behind

**Receiver Return Data Format:**

Content	Bytes	Data (H: HEX)	Description
Device Address	1	01H	01H Device, Range: 1-247, according to setting address
Function Code	1	02H	02 read input coil DIN status
Return Bytes Qty	1	01H	Range: 0000-0003, stands for DIN0-DIN3



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

Returning Data	1	00H	FFH converter to binary 1111 1111 from high to low byte, stands for DIN7-DIN0 status							
			(bit7)	(bit6)	(bit5)	(bit4)	DIN3 (bit3)	DIN2 (bit2)	DIN1 (bit1)	DIN0 (bit0)
			0	0	0	0	0	0	0	0
			Invalid	Invalid	Invalid	Invalid	Open	Open	Open	Open
			1= Close, 0= Open							
16CRC Verify	2	A1 88H	CRC0 CRC1 low byte in front, high behind							

Example: Inquiry device48 DIN data at same time, then:

**Server send:** 01 02 00 00 00 04 79 C9

01H= Device address; 02H= Inquiry DIN status; 00 00HDIN= Starting address; 00 04H= Serial reading 4 DIN status; 79 C9 H CRC verify.

**Device answer:** 01 02 01 00 A1 88

01H= Device address; 02H= Inquiry DIN status; 01H= Returning data bytes qty; 00H DIN status, every byte stands for one DIN status, FFH converter to binary 1111 1111 from high to low byte, stands for DIN3-DIN0 status, 0= Open, 1= Close, A1 88H 16 byte CRC verify.

If need to inquiry multi DIN status, only need to change "DIN Starting Address", "Reading DIN Register Qty", calculate CRC verify again.

**Read device AIN DIN pulse count value, temperature and humidity value, external power voltage value:**

**Master Send Data Format:**

Content	Bytes	Data (H: HEX)	Description
Device Address	1	01H	01H Device, Range: 1-247, according to setting address
Function Code	1	04H	04 read input register
Register Starting Address	2	00 00H	One address can read 2 bytes. AIN address range: 0000-000BH, One AIN data take two address, temperature address: 0018H, humidity address: 0019H, DIN1 count value address: 001A, 001B External power voltage address: 000E.
Read Register Qty	2	00 1CH	Read qty of input register, read AIN0 to DIN0 count value address, total 28 register, 0000H to 0001BH.
16CRC Verify	2	F1 C3H	CRC0 CRC1 low byte in front, high behind

**Receiver Return Data Format:**

Content	Bytes	Data (H: HEX)	Description
Device Address	1	01H	01H Device, Range: 1-247, according to setting address
Function	1	04H	04 read input register



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

Code																																																			
Data Bytes Range	1	38H	One address can read 2 bytes. AIN address range: 0000-000BH, One AIN data take two address, temperature address: 0018H, humidity address: 0019H, DINO count value address: 001A,001B External power voltage address: 000E。																																																
Returning Data	N	00 00 00 E7 00 00 00 DD 00 00 00 DD 00 00 00 DC 00 00 00 DE 00 00 00 DF 00 00 00 00 04 C6 01 9A 00 00 00 01 00 01 00 01 00 01 00 01 00 01 00 01 0B 36 1B E4 00 00 00 0B H	N= Returning bytes, sample data 56 points: <table border="1" style="width: 100%; text-align: center;"> <thead> <tr> <th>AIN</th> <th>AIN0</th> <th>AIN1</th> <th>AIN2</th> <th>AIN3</th> <th>Invalid</th> <th>Invalid</th> </tr> </thead> <tbody> <tr> <td>Receivin g Data</td> <td>00 00 00 E7H</td> <td>00 00 00 DDH</td> <td>00 00 00 DDH</td> <td>00 00 00 DCH</td> <td>00 00 00 DEH</td> <td>00 00 00 DFH</td> </tr> <tr> <td>Decimal Value</td> <td>194</td> <td>207</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>Real Value</td> <td>1.94</td> <td>2.07</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> </tbody> </table> <table border="1" style="width: 100%; text-align: center;"> <thead> <tr> <th>Other Value</th> <th>External Power Voltage</th> <th>Temperature</th> <th>Humidity</th> <th>DINO Count Value</th> </tr> </thead> <tbody> <tr> <td>Receivin g Data</td> <td>04 C6H</td> <td>0B 36H</td> <td>1B E4H</td> <td>00 00 00 0B</td> </tr> <tr> <td>Decimal Value</td> <td>1222</td> <td>2870</td> <td>7140</td> <td>11</td> </tr> <tr> <td>Real Value</td> <td>12.22V</td> <td>28.7℃</td> <td>71.4%RH</td> <td>11 times</td> </tr> </tbody> </table> AIN, External Power Voltage, Temperature, Humidity real value=Register value/100。	AIN	AIN0	AIN1	AIN2	AIN3	Invalid	Invalid	Receivin g Data	00 00 00 E7H	00 00 00 DDH	00 00 00 DDH	00 00 00 DCH	00 00 00 DEH	00 00 00 DFH	Decimal Value	194	207	0	0	0	0	Real Value	1.94	2.07	0	0	0	0	Other Value	External Power Voltage	Temperature	Humidity	DINO Count Value	Receivin g Data	04 C6H	0B 36H	1B E4H	00 00 00 0B	Decimal Value	1222	2870	7140	11	Real Value	12.22V	28.7℃	71.4%RH	11 times
AIN	AIN0	AIN1	AIN2	AIN3	Invalid	Invalid																																													
Receivin g Data	00 00 00 E7H	00 00 00 DDH	00 00 00 DDH	00 00 00 DCH	00 00 00 DEH	00 00 00 DFH																																													
Decimal Value	194	207	0	0	0	0																																													
Real Value	1.94	2.07	0	0	0	0																																													
Other Value	External Power Voltage	Temperature	Humidity	DINO Count Value																																															
Receivin g Data	04 C6H	0B 36H	1B E4H	00 00 00 0B																																															
Decimal Value	1222	2870	7140	11																																															
Real Value	12.22V	28.7℃	71.4%RH	11 times																																															
16CRC Verify	2	A9 3CH	CRC0 CRC1 low byte in front, high behind																																																

Example: Inquiry device 28 input type register at same time, start from address 0. Include 6 AIN, one device temperature, humidity, external power voltage, DINO count value, then:

**Server send:** 01 04 00 00 00 1C F1 C3

01H= Device address; 04H= Read input register value; 00 00H AIN0= Starting address; 00 1CH= Serial reading 28 input register value; F1 C3H CRC verify.

**Device answer:** 01 04 38 00 00 00 E7 00 00 00 DD 00 00 00 DD 00 00 00 DC 00 00 00 DE 00 00 00 DF 00 00 00 00 04 C6 01 9A 00 00 00 01 00 01 00 01 00 01 00 01 00 01 00 01 0B 36 1B E4 00 00 00 0B A9 3C

01H= Device address; 04H= Read input register value; 56 bytes data after 38H, 00 00 00 E7H AIN0 value, 00 00 00 00 DD AIN1 value, 00 00 00 DDH AIN2 value, 00 00 00 DCH AIN3 value, 00 00 00 DEH invalid value, 00 00 00 DFH invalid value, 00 00 00 00H invalid value, 04 C6H external power voltage value, 01 9A 00 00 00 01 00 01 00 01 00 01 00 01 00 01 00 01H invalid value, 0B 36H temperature value, 1B 36H humidity value, 00 00 00 0B H DINO count value, A9 3C CRC verify.



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

## 10. MQTT Protocol

### MQTT

#### Introduction to MQTT

MQTT is a client-server based message publish/subscribe transfer protocol. The MQTT protocol is lightweight, simple, open, and easy to implement. These characteristics make it applicable to a wide range. In many cases, including restricted environments, such as: machine-to-machine (M2M) communication and Internet of Things (IoT). It has been widely used in communication sensors via satellite links, occasionally dialed medical devices, smart homes, and some miniaturized devices. The MQTT protocol runs on TCP/IP or other network protocols and provides orderly, lossless, bidirectional connections.


#### MQTT implementation principle

There are three kinds of identities in the MQTT protocol: publisher (Publish), broker (Broker) (server), and subscriber (Subscribe). Among them, the publisher and subscriber of the message are both clients, the message broker is the server, and the message publisher can also be a subscriber. Take S27X connected to King Pigeon cloud 2.0 platform as an example:

When the device publish I/O point data:



When the customer control the device:



#### Configuration:

**Domain:** (King Pigeon Cloud 2.0 default:mqtt.dtuip.com)

**Server Port :** Broker Server Port number (King Pigeon Cloud 2.0 default:1883)

**Subscribe topic:** Client subscribe topic (King Pigeon Cloud 2.0 default:login message/+)

**Publish topic:** Device publish data topic (King Pigeon Cloud 2.0 default:login message)

**MQTT Client ID:** The unique identity of the device, which can be a serial number, device ID, or IMEI(King Pigeon Cloud 2.0 default is serial number)

**MQTT user name:** Device's account on the broker server (King Pigeon Cloud 2.0 default is MQTT)

**MQTT password:** Password of device's account on the broker server(King Pigeon Cloud 2.0 default is MQTTPW)

After the configuration is complete, the client will initiate a connection to the server:



## GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

CONNECT: The client sends a "CONNECT" connection message request to the server;

CONNACK: The server responds with a "CONNACK" confirmation connection message, indicating that the connection is successful;

After the client establishes a connection, it is a long connection, and the client can publish or subscribe to the message on the server;

Take the device and the client's mobile phone as the client:

After the device publishes the topic on the broker proxy server, the customer can view the data through subscription. That is, the device is the publisher and the customer's mobile phone is the subscriber.

Users can also publish topics through the MQTT server to control the device. That is, the user is the publisher and the device is the subscriber.

### Payload data format of device publish message

```
Publish Topic: MQTT client ID (filled in configuration software)
{
  "sensorDatas":
  [
    {
      "flag": "DI1",      //Read and write flag
      "switcher": 1     //data type and value
    },
    {
      "flag": "AI1",
      "value": 10.00
    }
    {
      "flag": "REG20000", // Register address and value
      "value": 1.00
    }
  ],
  "time": "1591841863",
  //Time stamp (When power on,first time connection no time stamp,later connections
  have time stamp)
  "state": "alarm",
  //Alarm and recovery (only for alarm or recovery data, but not for timely report)
  "retransmit": "enable"
  //Historical data (only for re-transmission of historical data, but not for real-time data)
}
```

#### Note:

//Read and write flag: the character is "flag", followed by "read and write identification of IO data points"

//Data type and value:

1. Switch-type data: the character is "switcher", followed by "0" or "1" (0 open, 1 closed)

2. Numerical data: the character is "value", followed by "specific value"

//Timestamp: the character is "time", followed by "specific timestamp "

//Alarm and recovery identification: the characters are "state", followed by "alarm" or "recovery" (alarm is alarm data, recovery is recovery data)



# GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

//Historical data identification: the character is "retransmit", followed by "enable"

The data collected during the network disconnection will be temporarily stored in the device, and will be republished when the network is recovered. It is identified by the "retransmit" character, indicating historical data. (Need to enable MQTT data retransmission function in the configuration software)

Subscribe Topic	<input type="text"/>
Publish Topic	<input type="text"/>
MQTT Client ID	<input type="text"/>
MQTT User Name	<input type="text"/>
MQTT Password	<input type="text"/>
Automatic data upload cycle	<input type="text"/> Sec
MQTT Data retransmission	<input checked="" type="checkbox"/> Enable / disable

### Payload data format in device subscription message

(The topic of the King Pigeon 2.0 platform downstream publish message is called "device serial number/sensor ID", so the device subscribe topic needs to add the wildcard "/"+" in order to receive the data sent by the platform to achieve control)Subscribe topic: device serial number /+ (corresponding to the data filled in the subscribe topic item on the configuration software)

```
{
  "sensorDatas":
  [
    {
      "sensorsId": 211267, //platform sensor ID
      "switcher": 1,      //data type :value
      "flag":"DO1"       // Read and write flag
    }
  ],
  "down":"down"         //Platform downstream packet identification
}
```

**Note:**

//Platform sensor ID: the character is "sensorsID", followed by the ID number (ID is automatically generated by the platform)

//Data type and value:

1. Switch-type data: the character is "switcher", followed by "0" or "1" (0 open, 1 closed)
2. Numerical data: the character is "value", followed by "specific value"

//Read and write flag: the character is "flag", followed by "read and write identification of IO data points"

//Downstream packet identification of the platform: the character is "down", followed by "down", which means that this is the downlink data of the platform.

### Device I/O data point read and write flag

Data Point	Flag	Type	Description
DO	DOx	Switcher	0 is open, 1 is closed
DI	DIx	Switcher	0 is open, 1 is closed
AI	AIx	Value	True value = original value
Temperature	TEMP	Value	True value = original value
Humidity	HUMI	Value	True value = original value
External power voltage	EXTPWR	Value	True value = original value
DINO counter	COUNT	Value	True value = original value



## GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU

DIN1counter	COUNT1	Value	True value = original value
DIN2 counter	COUNT2	Value	True value = original value
DIN3counter	COUNT3	Value	True value = original value

**Note:**

“DOx” : DO0、DO1、DO2、DO3 ;

“DIx” : DI0、DI1、DI2、DI3、DI4、DI5、DI6、DI7;

“AIx” : AI0、AI1、AI2、AI3、AI4、AI5.

### 11. Upgrade Firmware

The device supports upgrade firmware via USB port directly. If you required upgrade, please contact us to discuss and modify the firmware according to you requirements, we can provide the upgraded firmware to you to upgrade them.


### 12. Cellular Module Upgrade

The device adopt modular structure design, when user local Gsm operator upgrade network, no need to replace the whole hardware, only need to replace inbuilt communication module, easily upgrade Gsm to 3G, or 3G to 4G network.

## Cellular Module Upgrade

Users can easily upgrade GSM (or 3G) to 3G/4G, NB-IoT or 5G network.

*No need to replace whole device again when local network upgrade, only pick Gsm module out, put a 3G/4G module in, then device can support 3G/4G.*

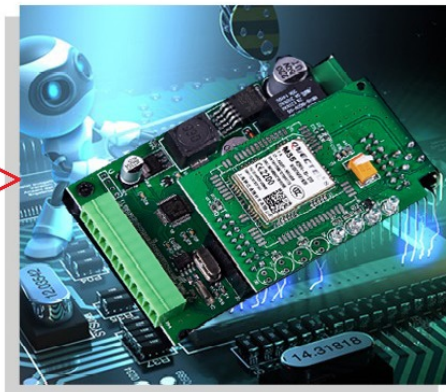

### 13. Warranty

1) This system is warranted to be free of defects in material and workmanship for one year.





## **GSM/SMS/GPRS/3G/4G Cellular IoT M2M RTU**

2) This warranty does not extend to any defect, malfunction or failure caused by abuse or misuse by the Operating Instructions. In no event shall the manufacturer be liable for any alarm system altered by purchasers

The End!

Any questions please help to contact us feel free.

[Http://www.iot-solution.com](http://www.iot-solution.com)